

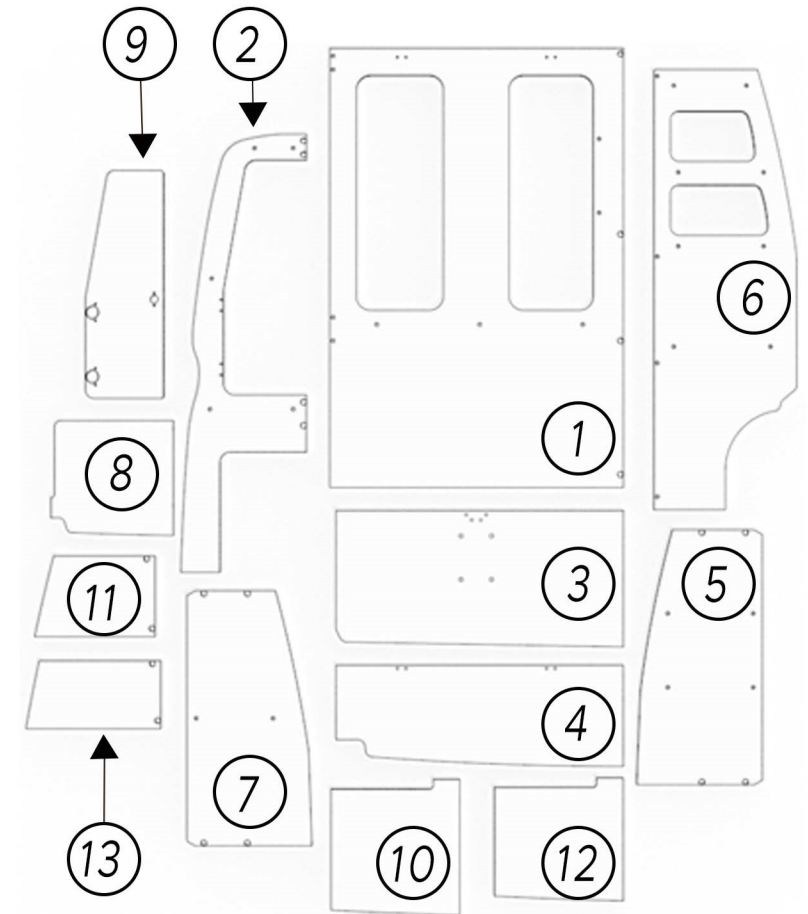
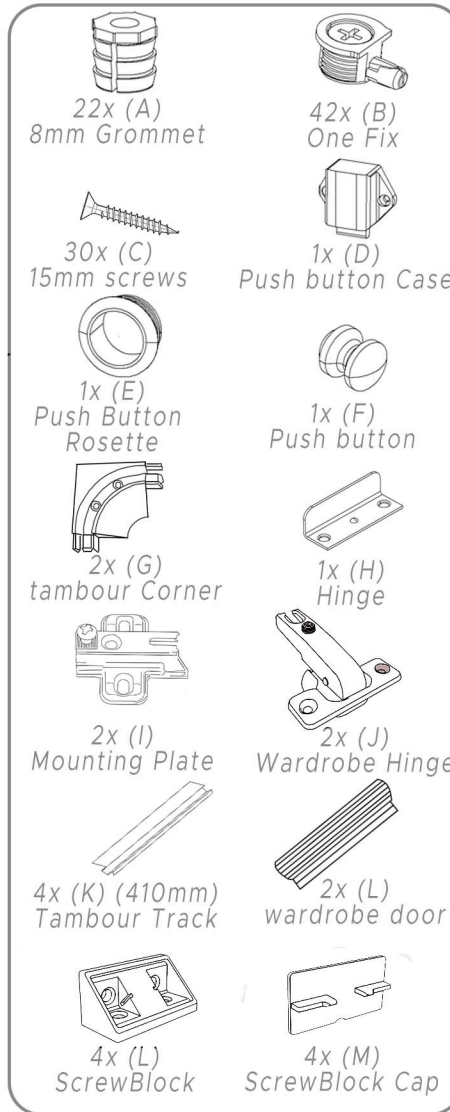
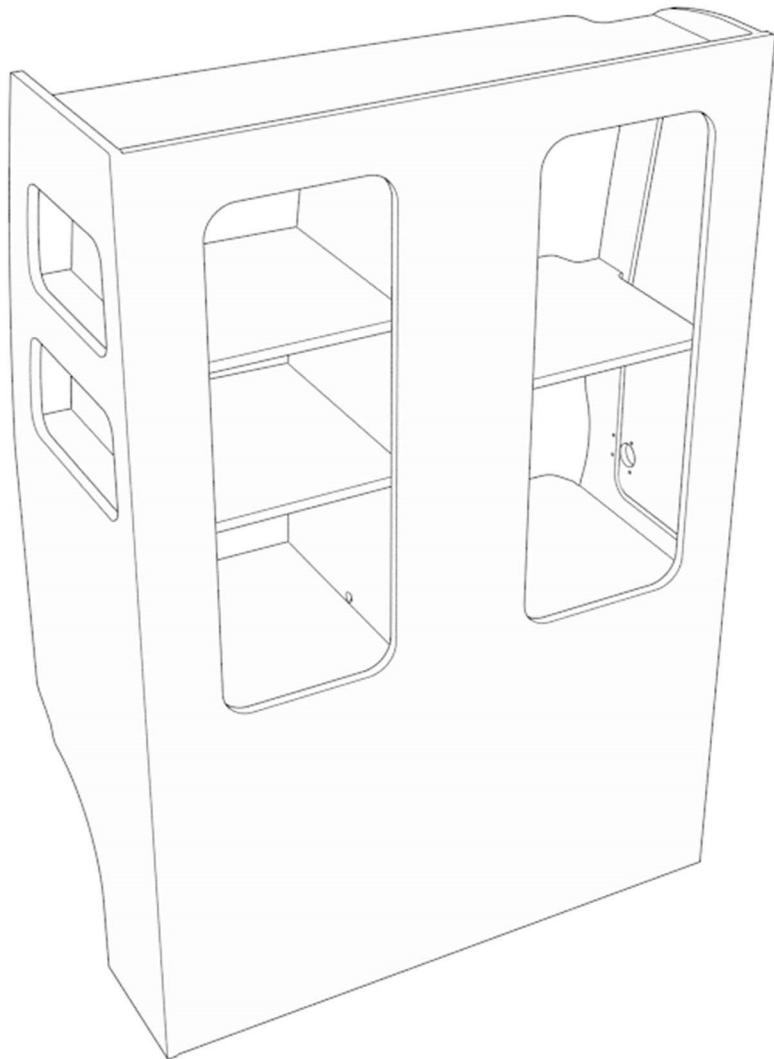
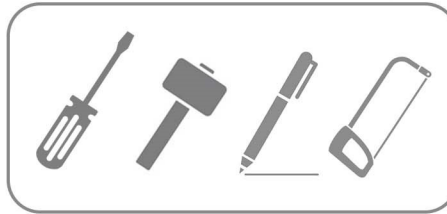



Coastline SWB Wardrobe

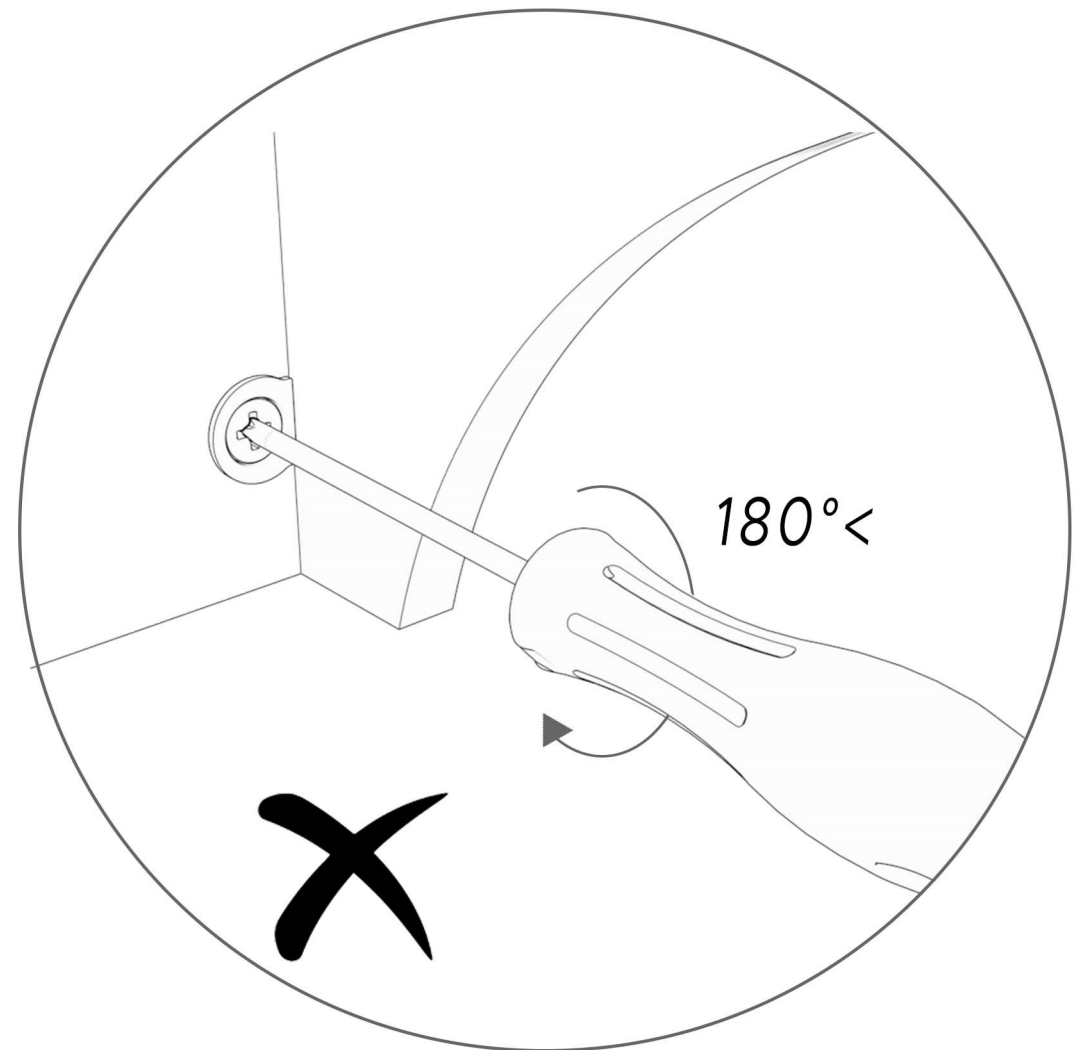




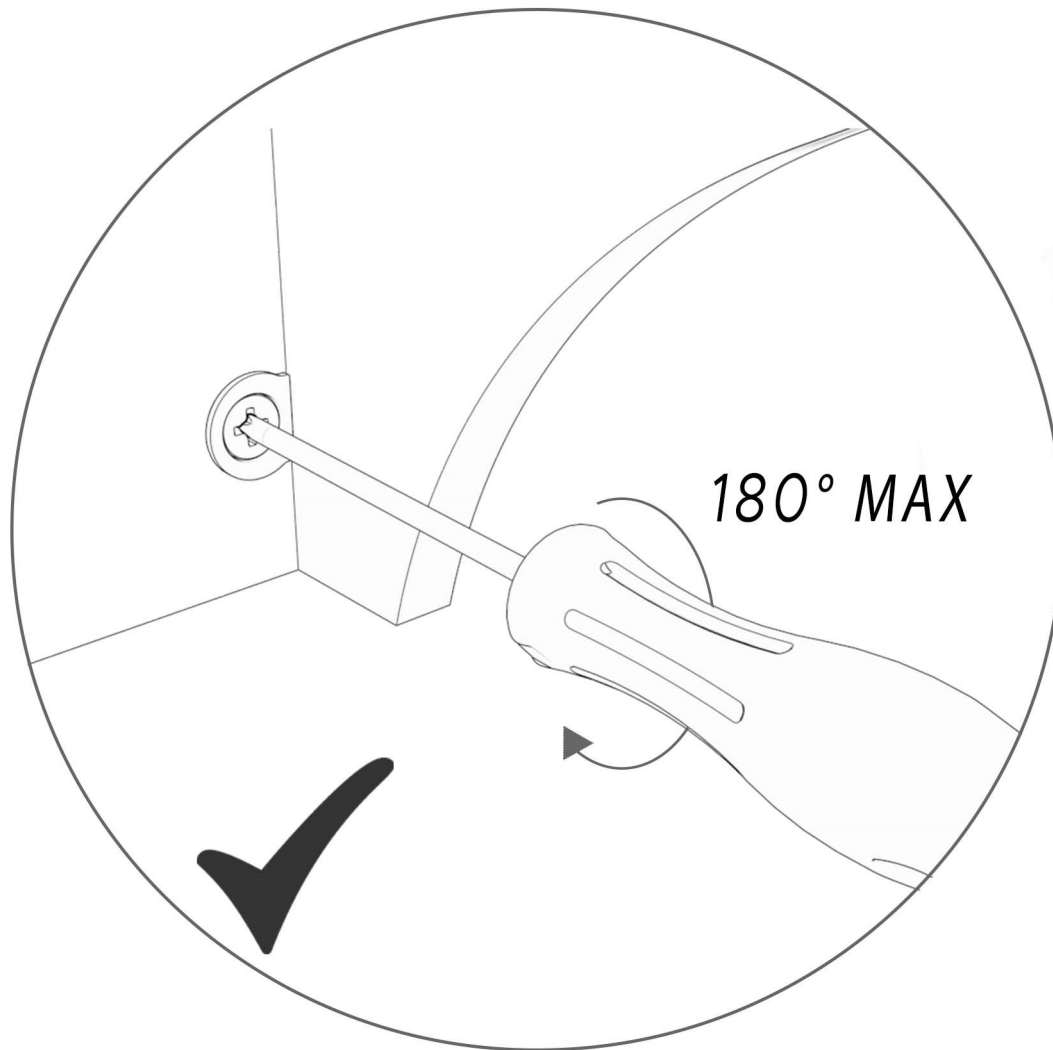


*Do not over tighten Onefix
Connectors!*

1.

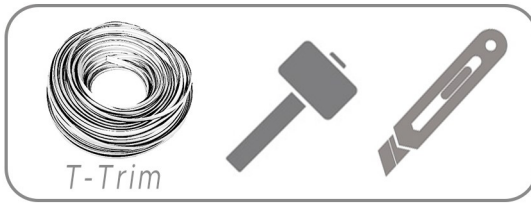


All pieces must have T-Trim applied before assembly!

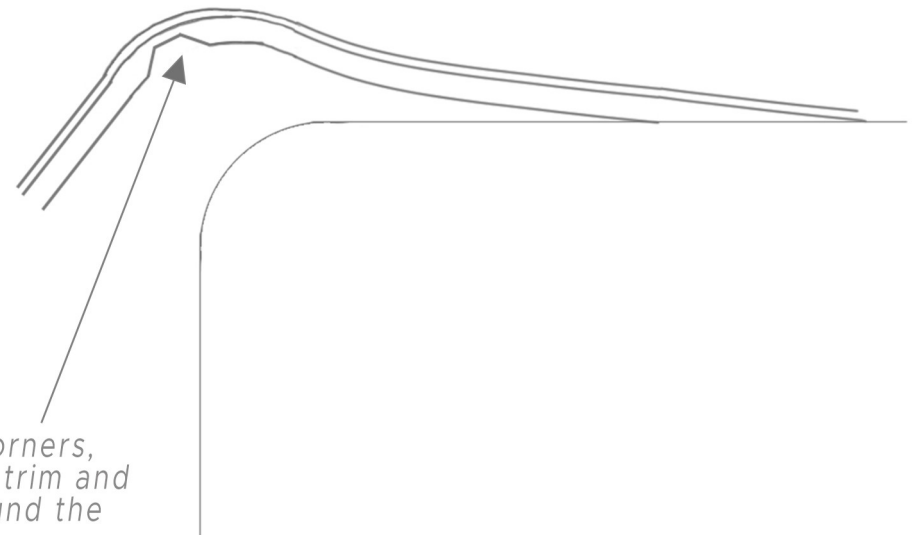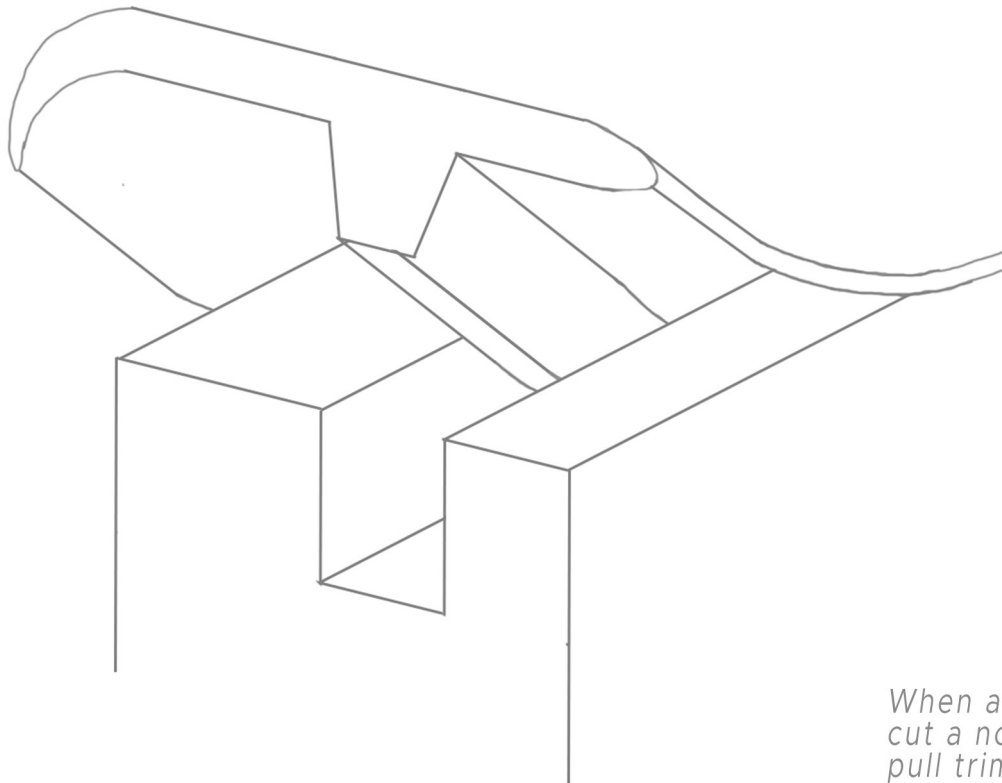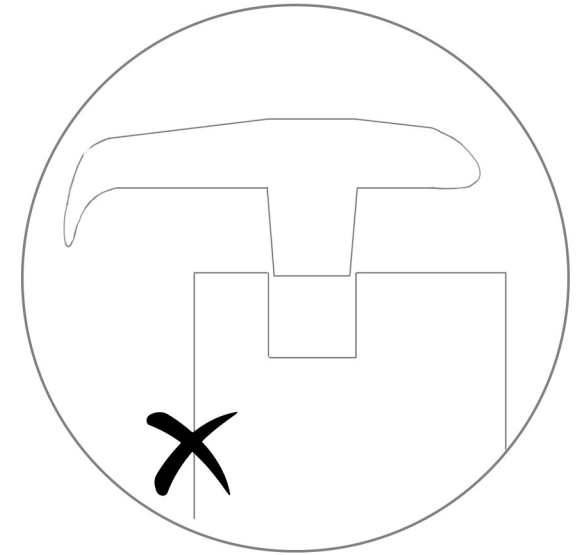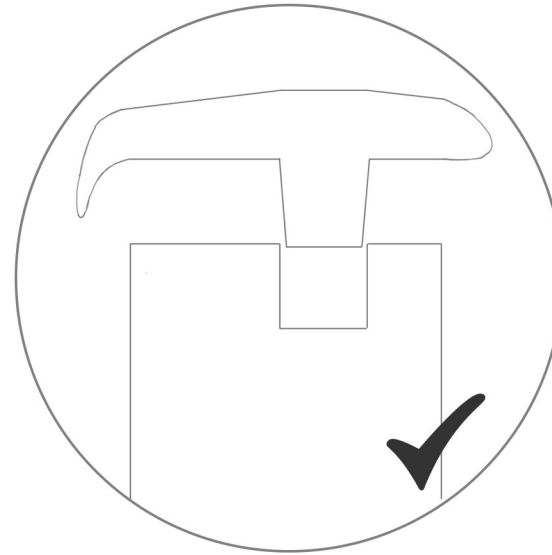


When applying to corners, cut a notch into the trim and pull trim tightly around the corner.


2.

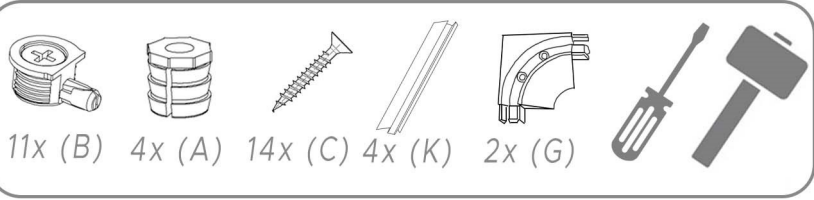


2.a

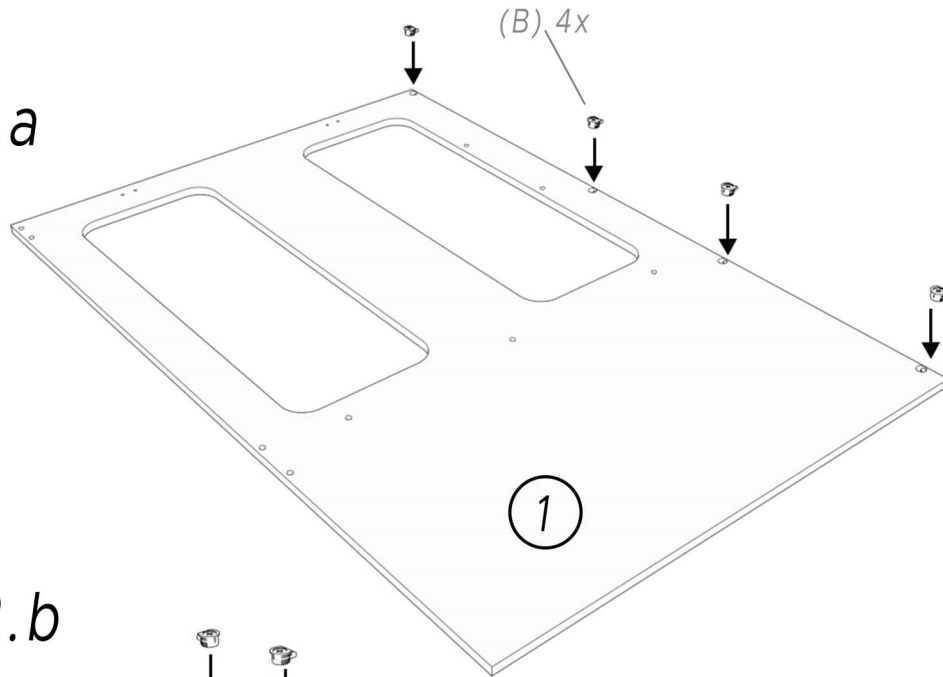


2.b

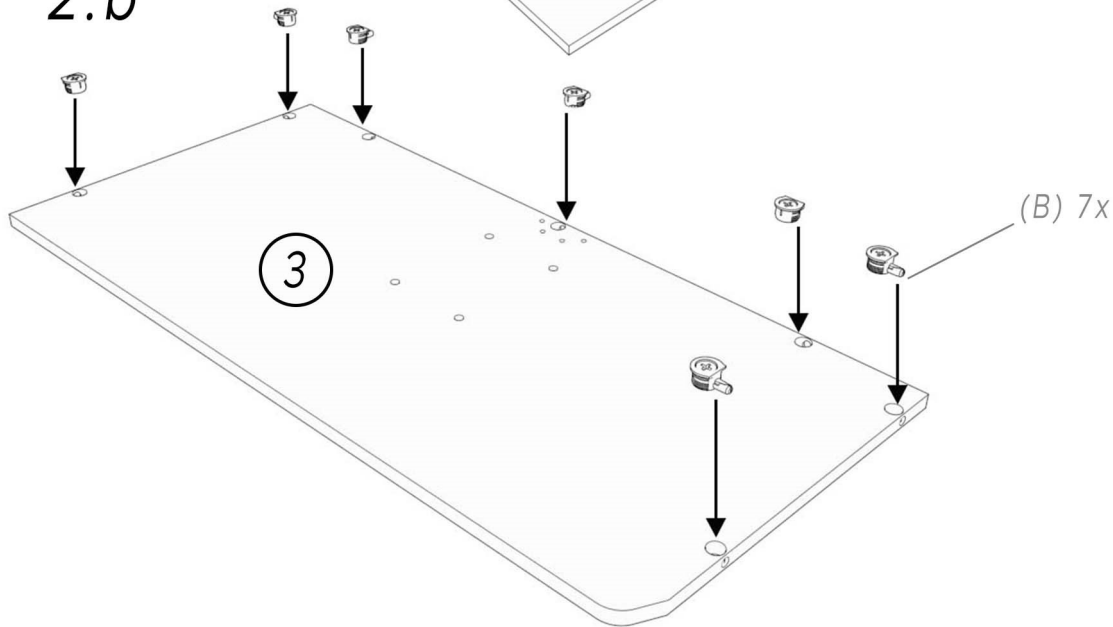


2.c

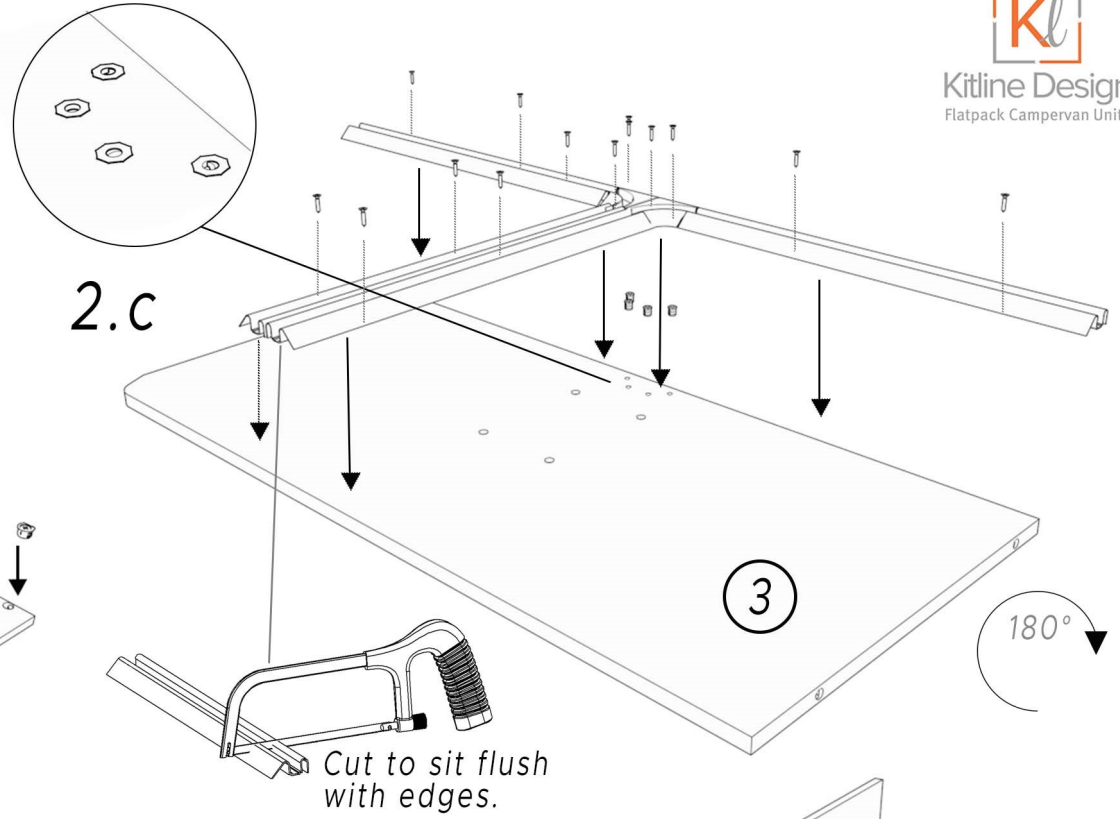


2.d

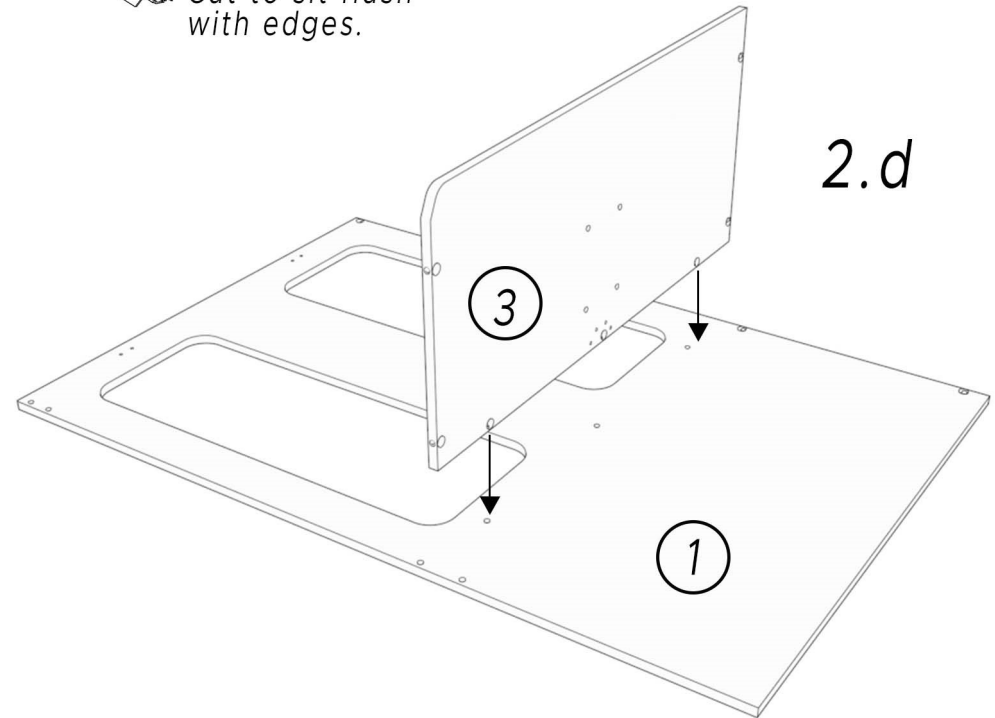


3.

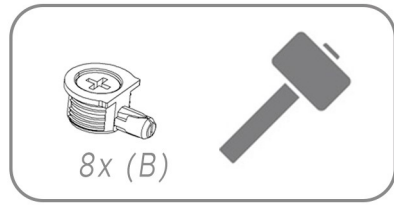


3.a

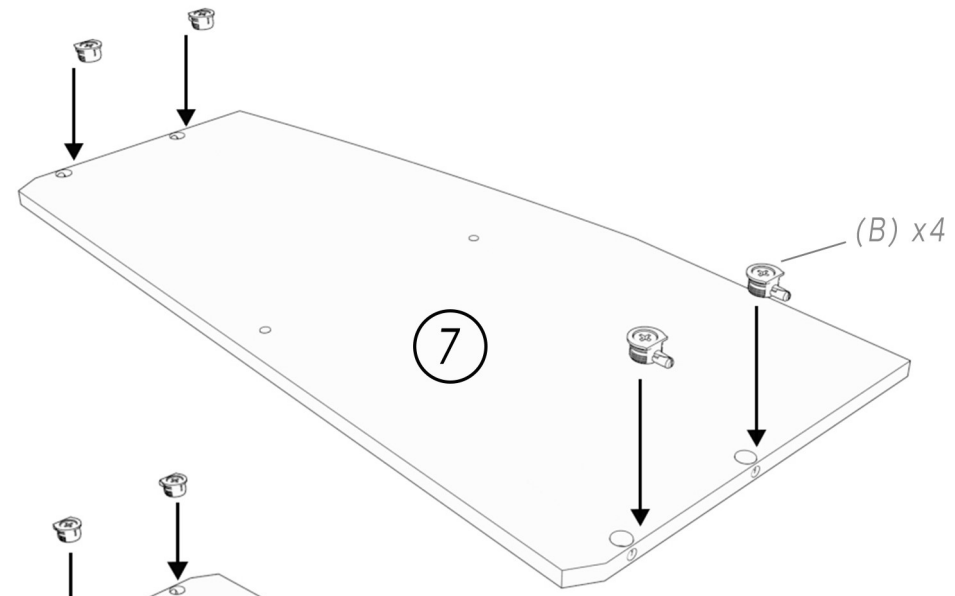


3.b

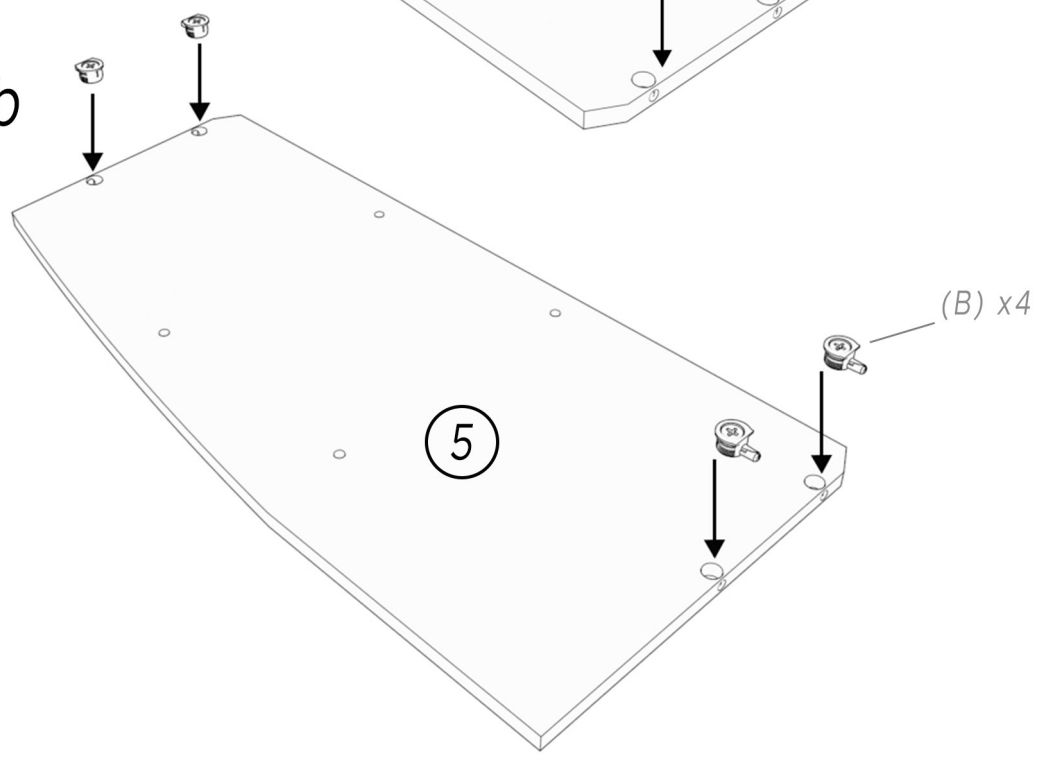


3.c

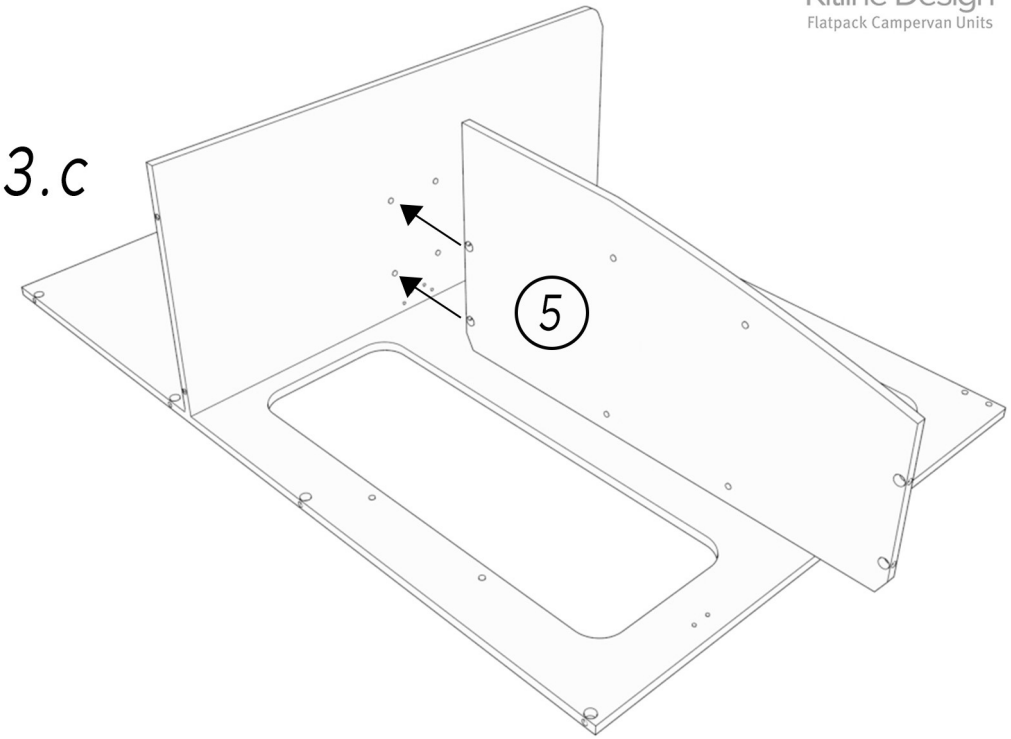


3.d

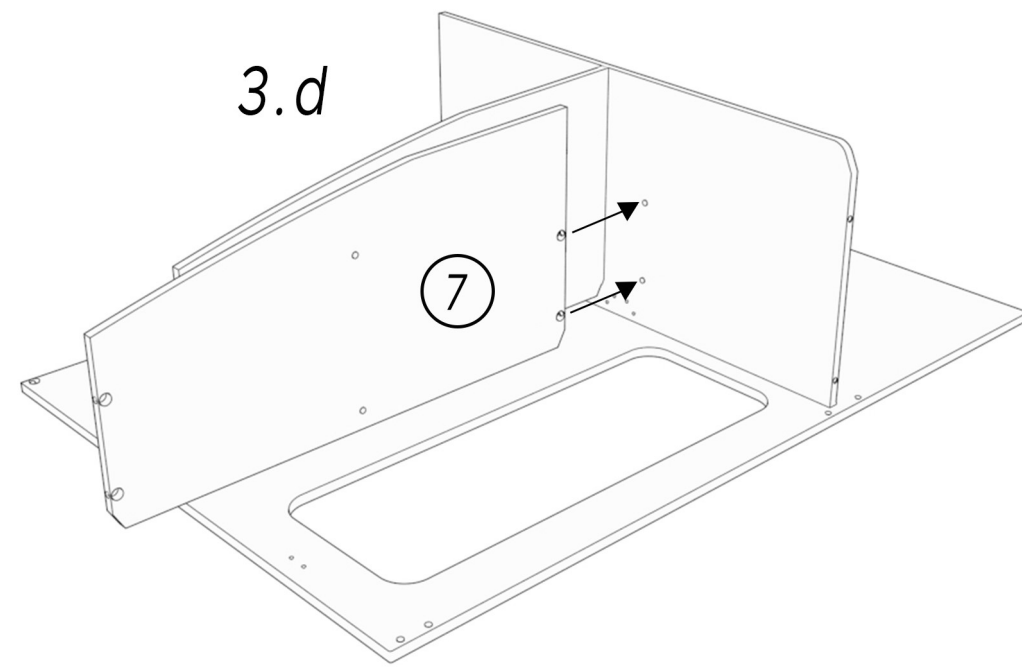


4.

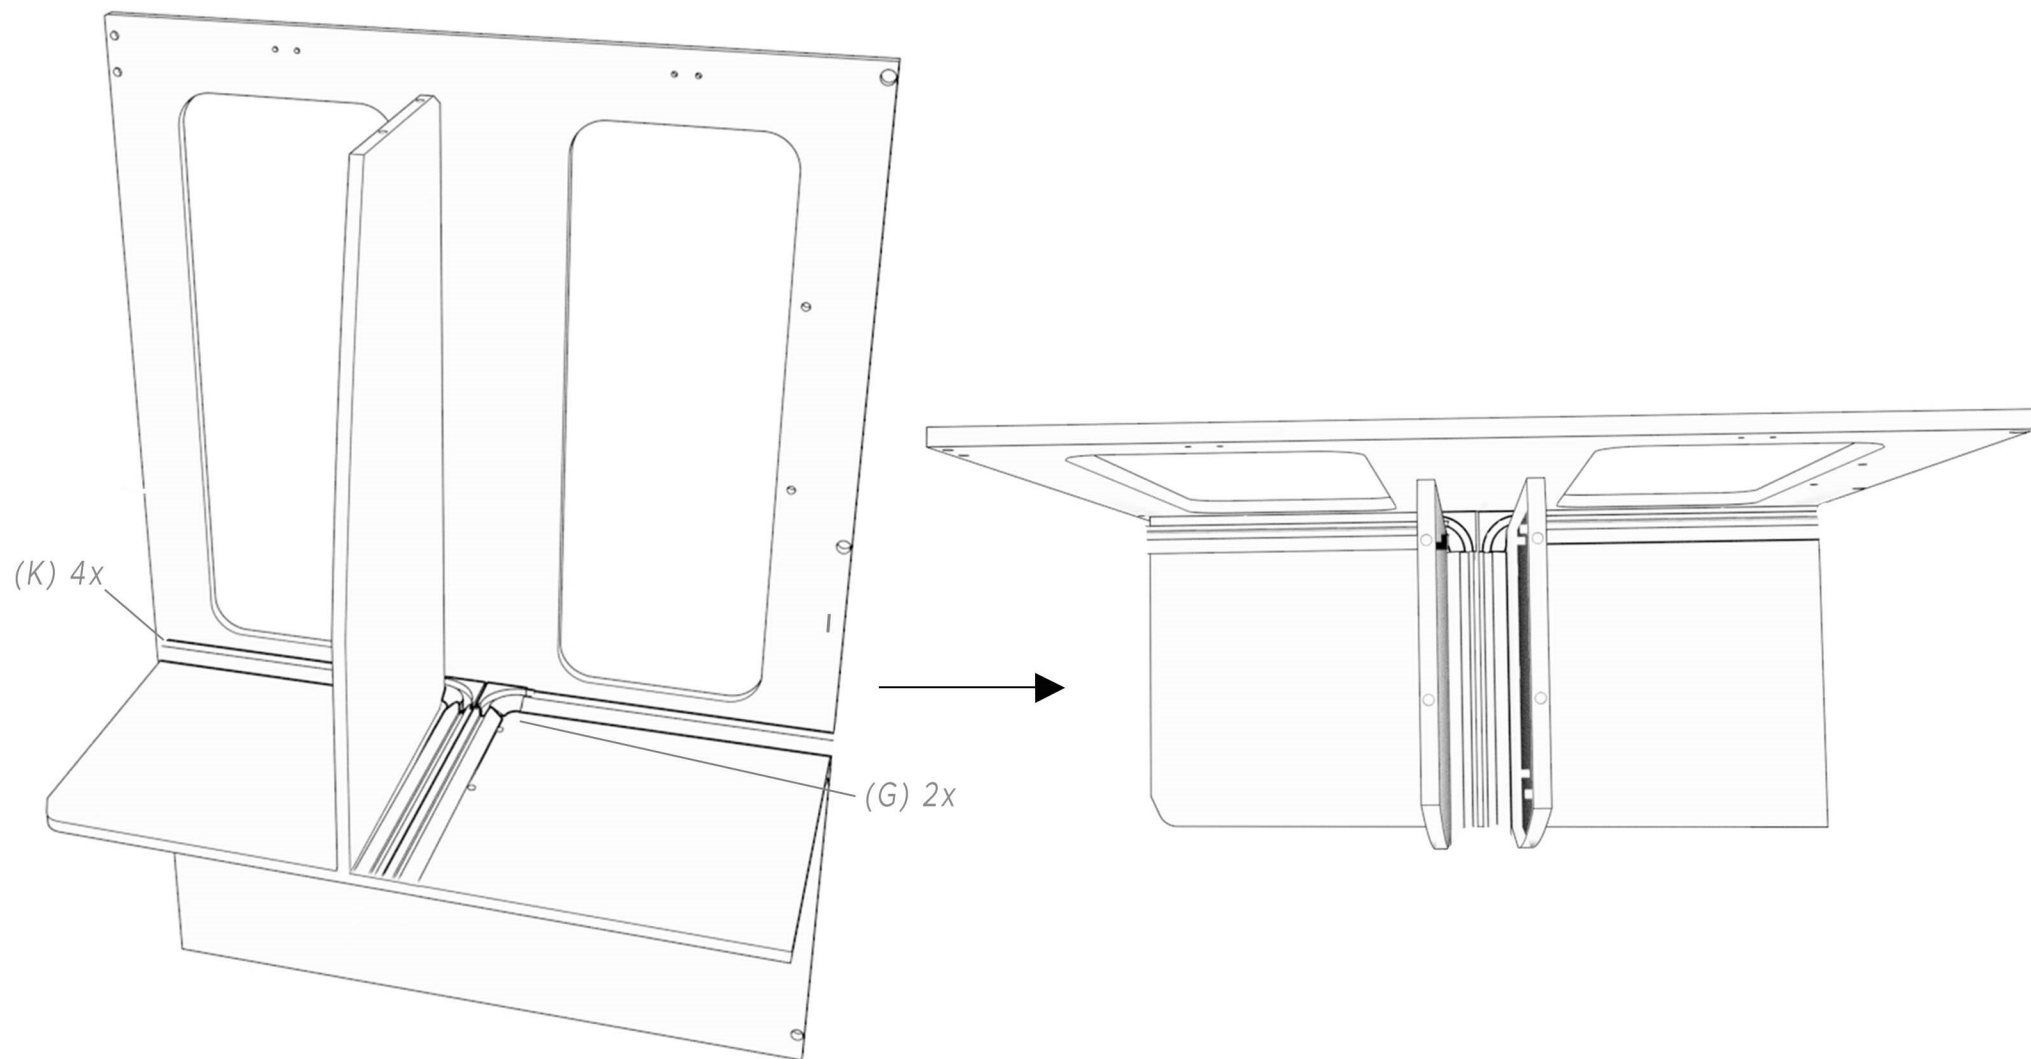

5.

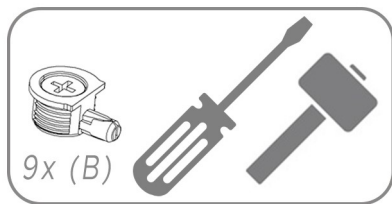

(B) 3x

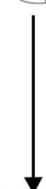

8


5.a



(B) 4x



12

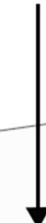

(B) 2x

13


5.b

8


5.c

12



13

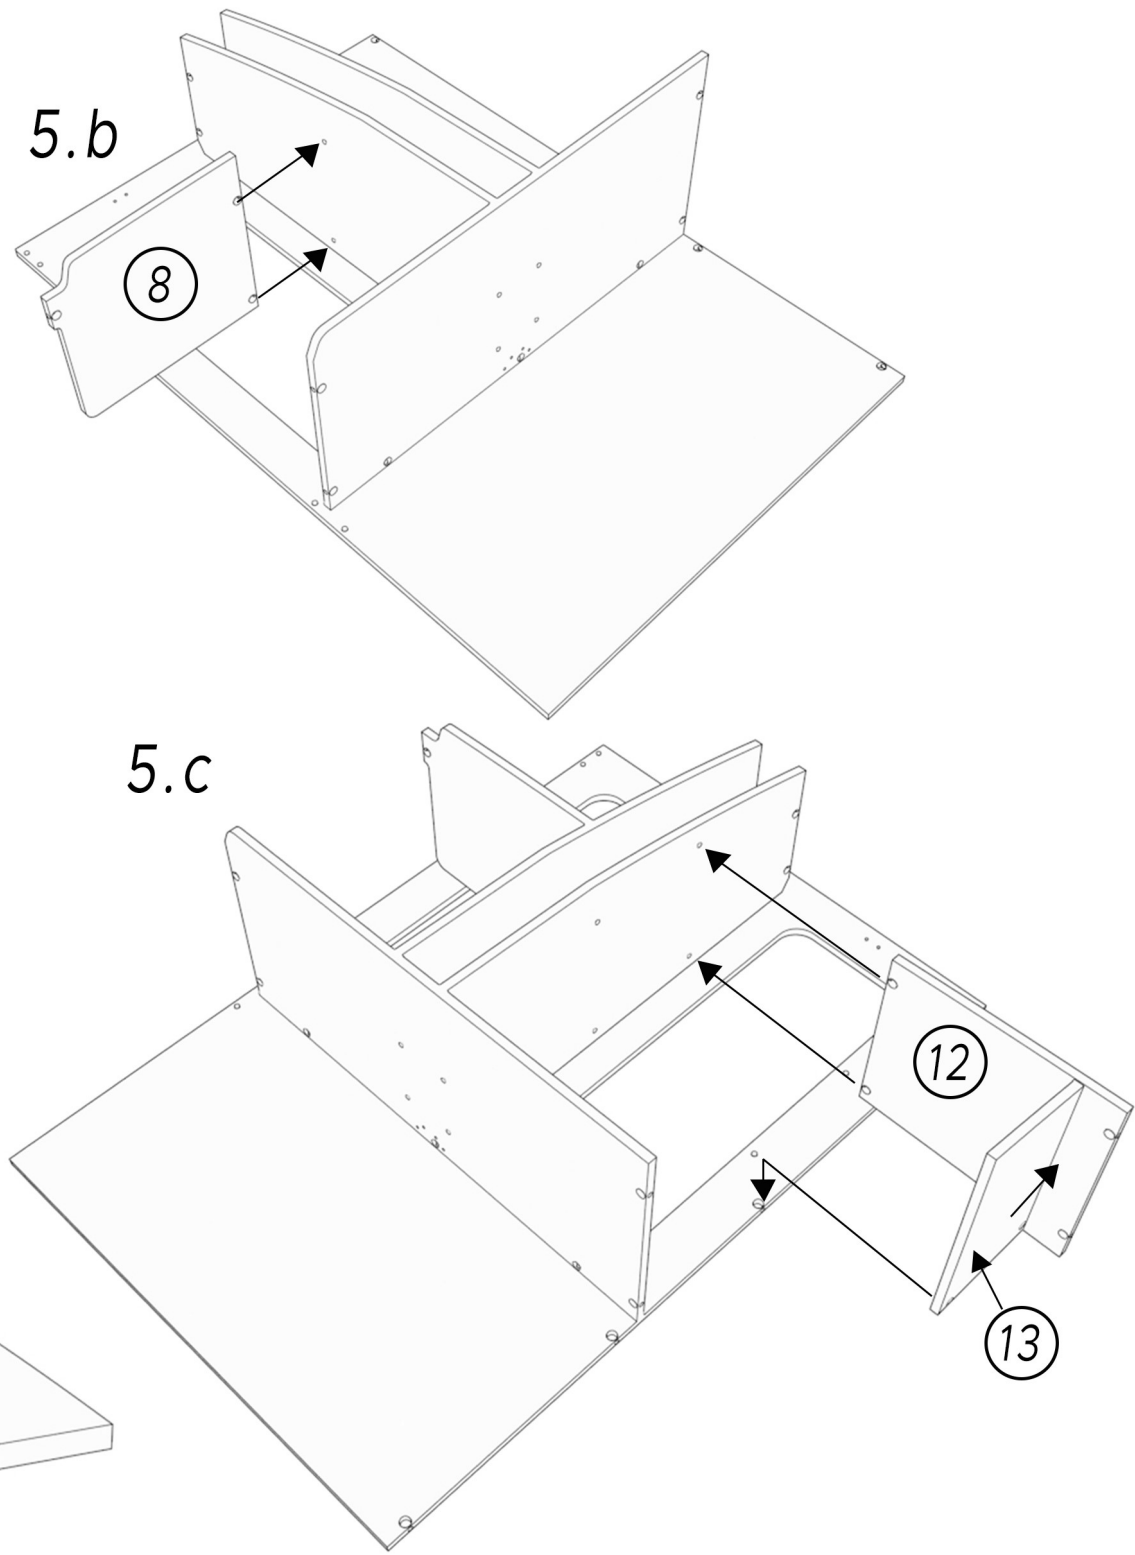


6.

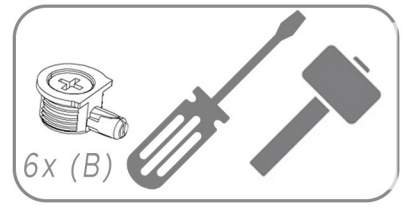


6.a

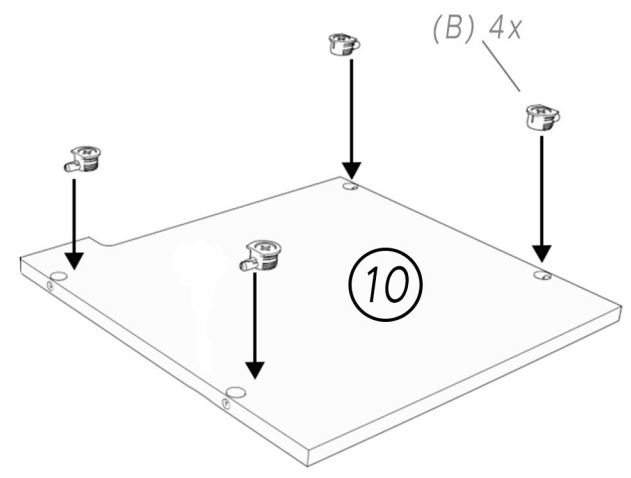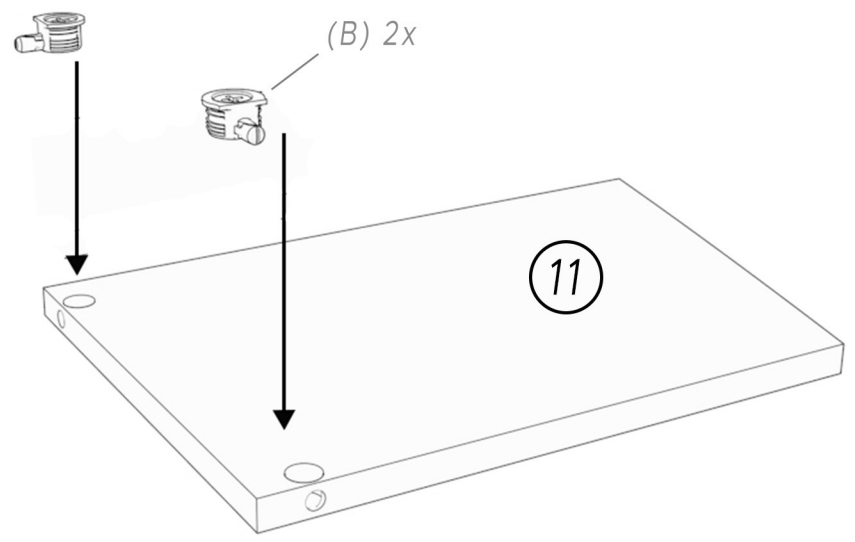

6.b

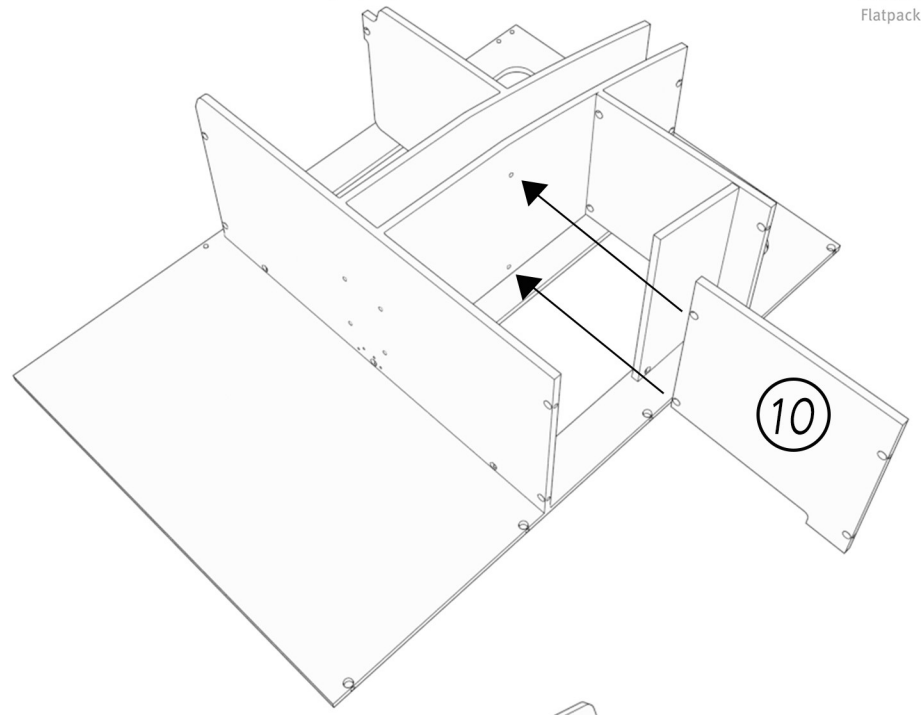


6.c

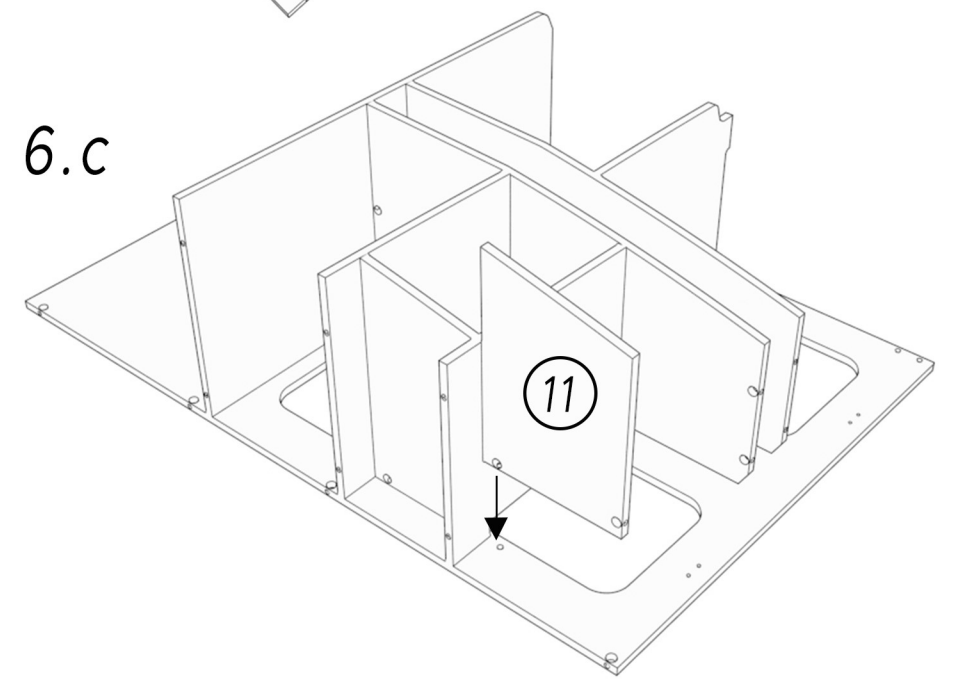




7.

4x (B)
 8x (A)
 4x (K)
 2x (G)
 2x (L)
 2x (M)



7.c

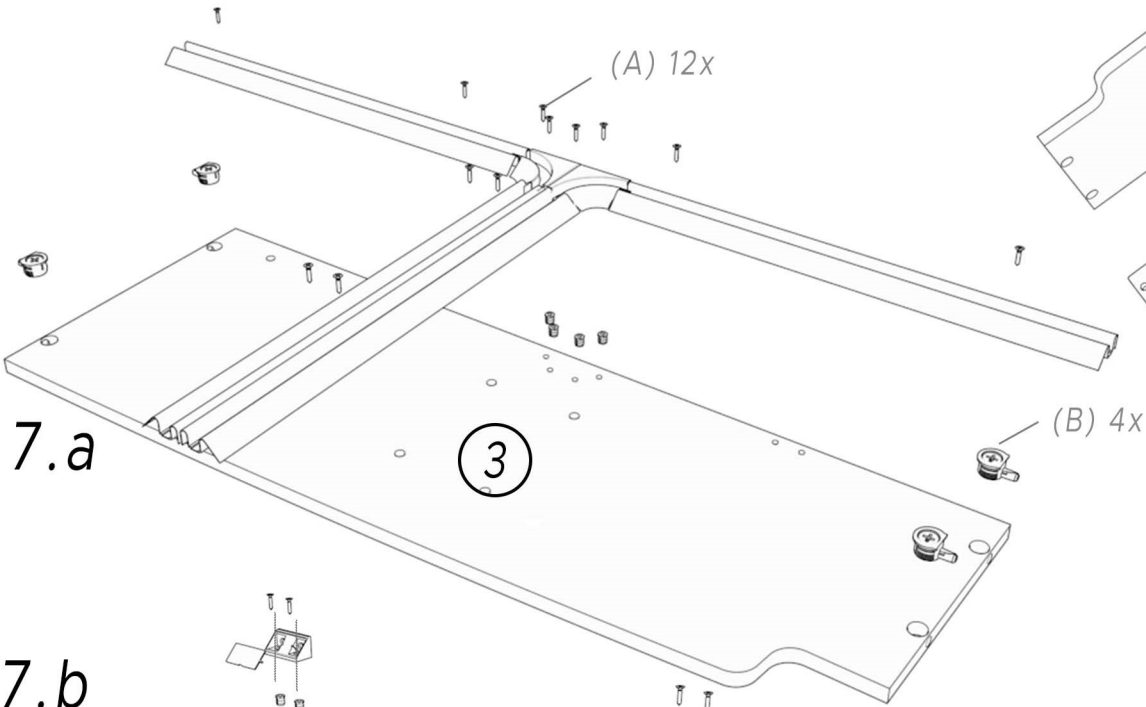



7.b

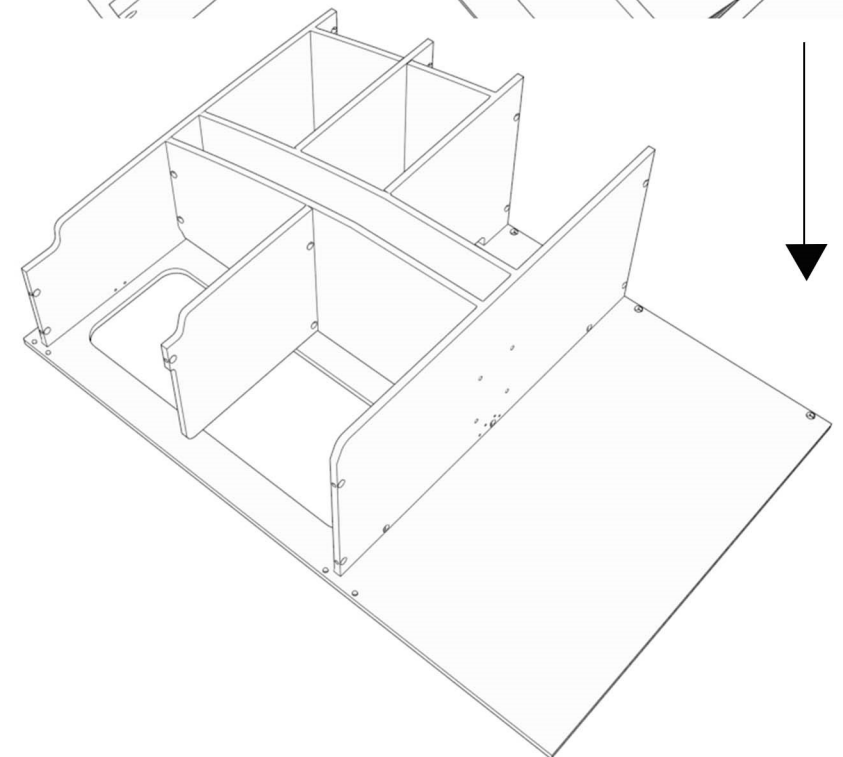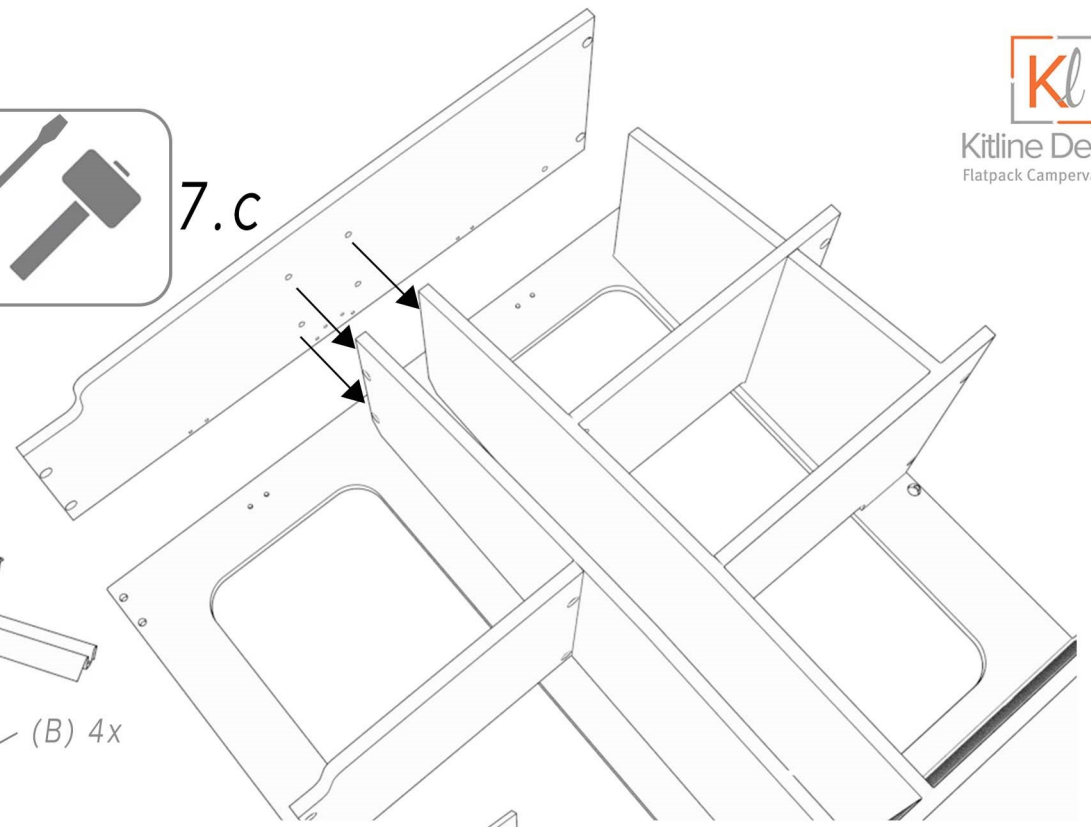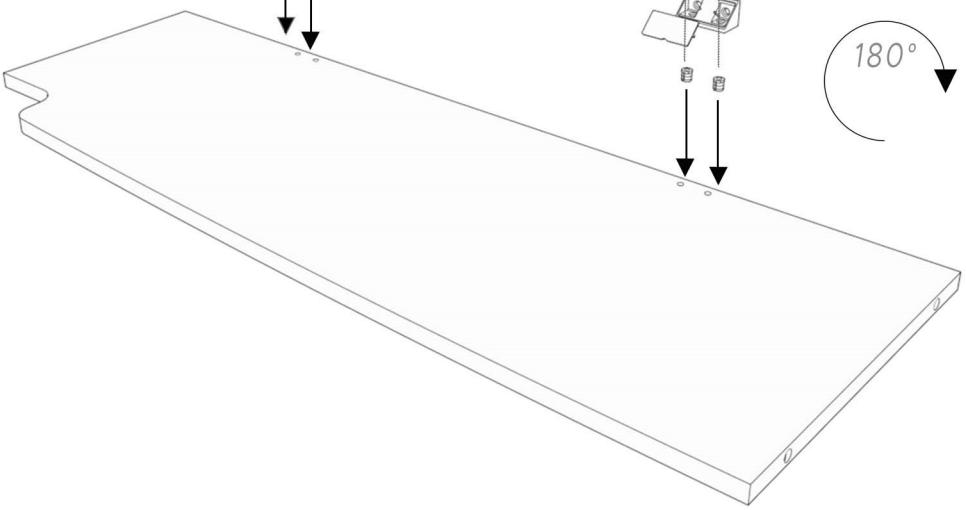


8.

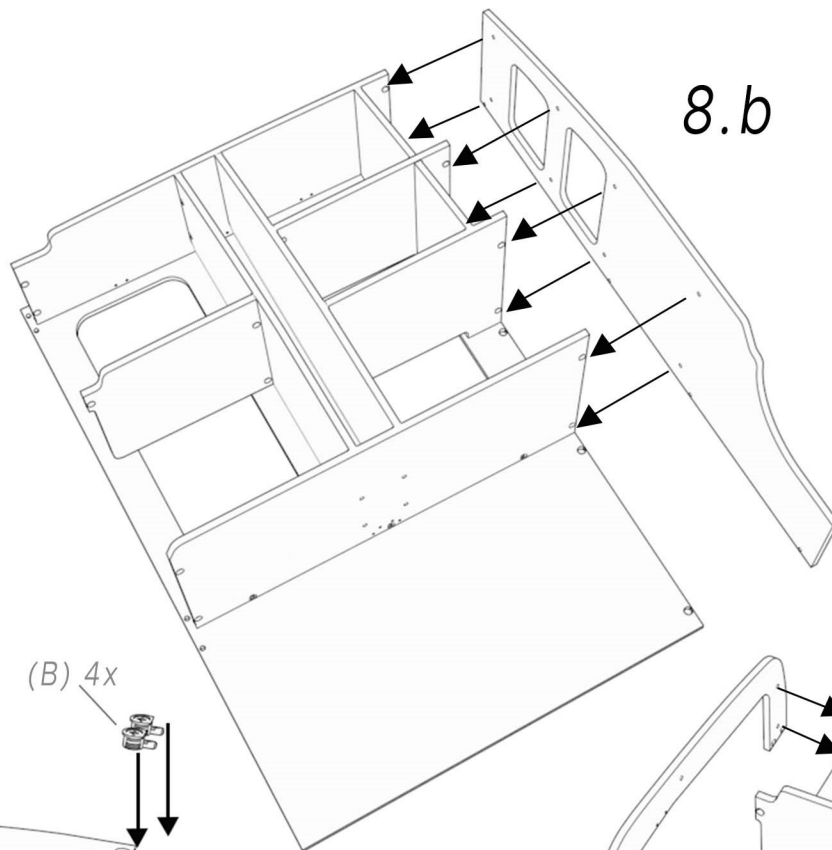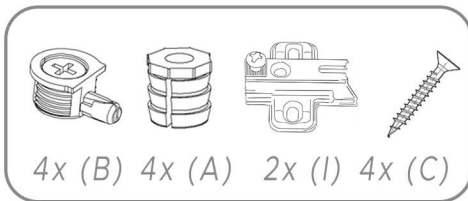

8.a

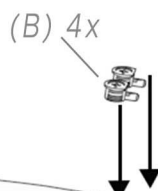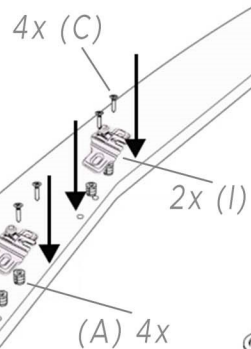


8.c

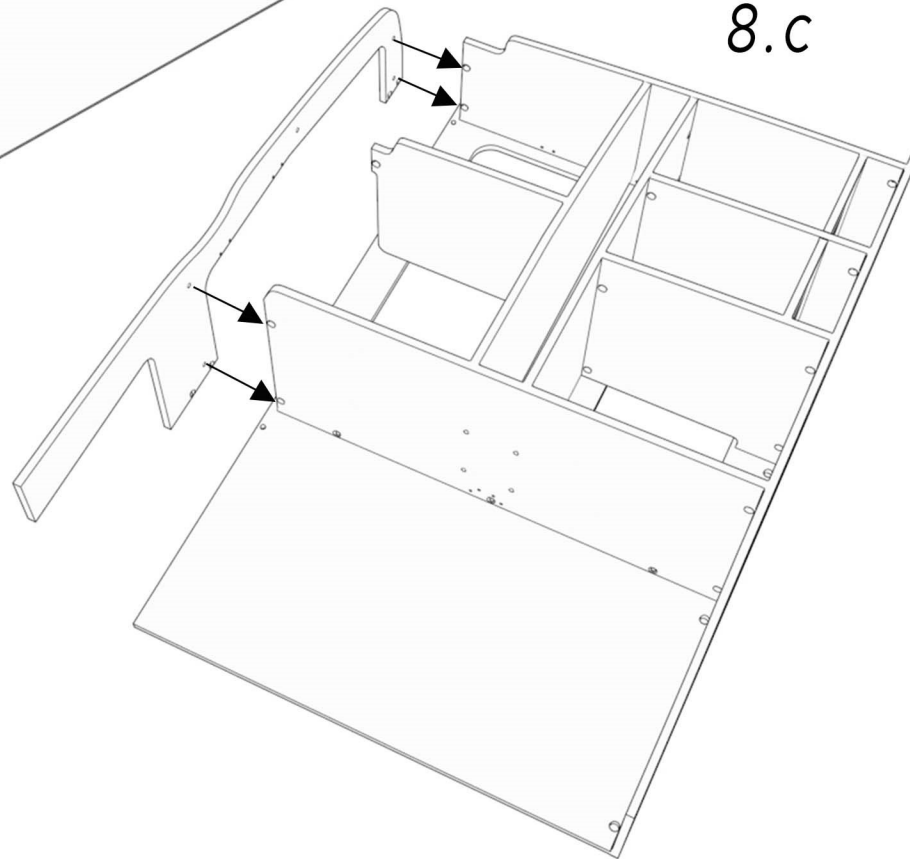


Kitline Design
Flatpack Campervan Units


9.

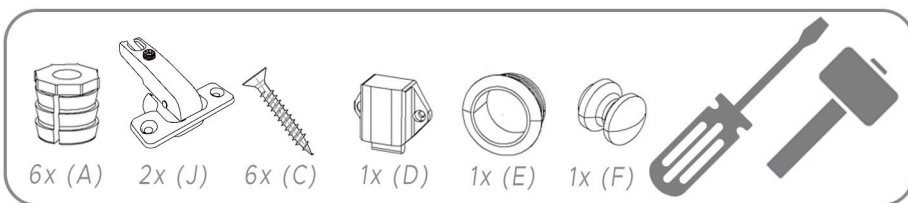


9.a

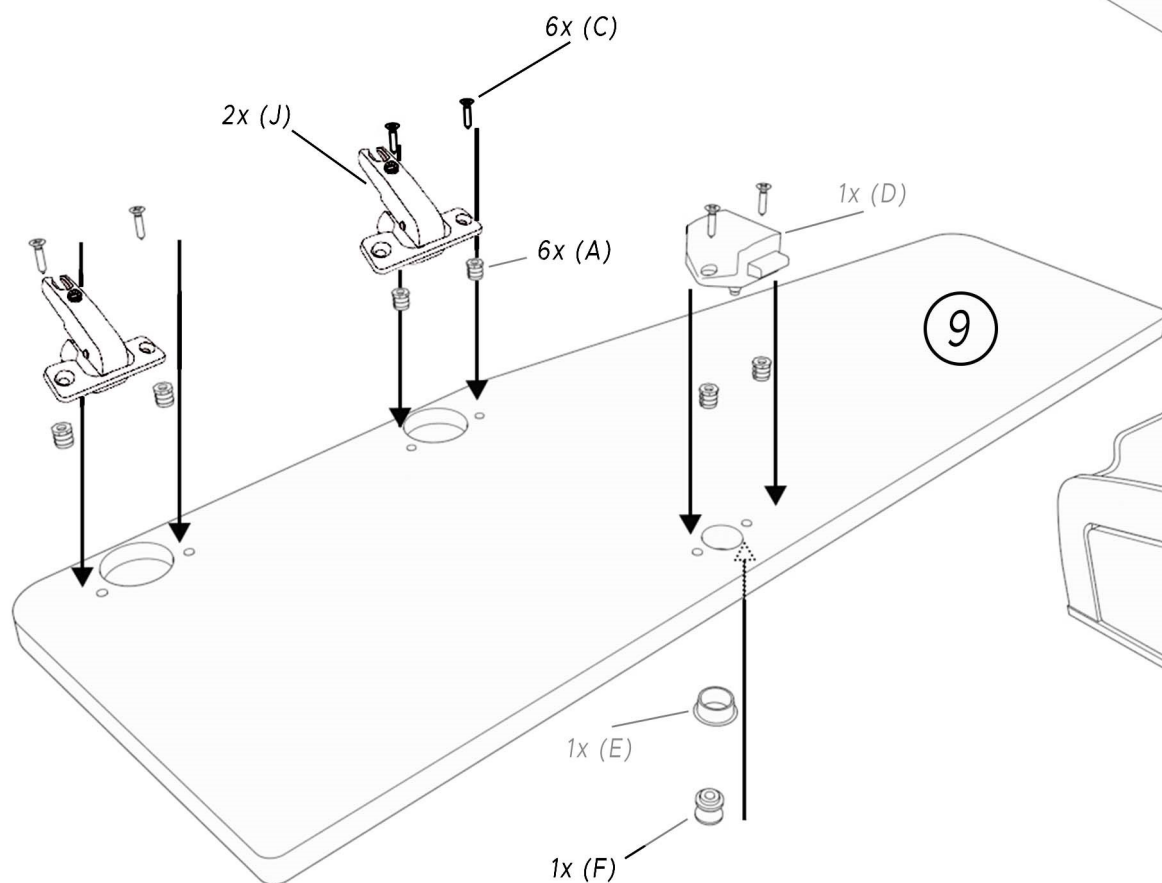


9.b

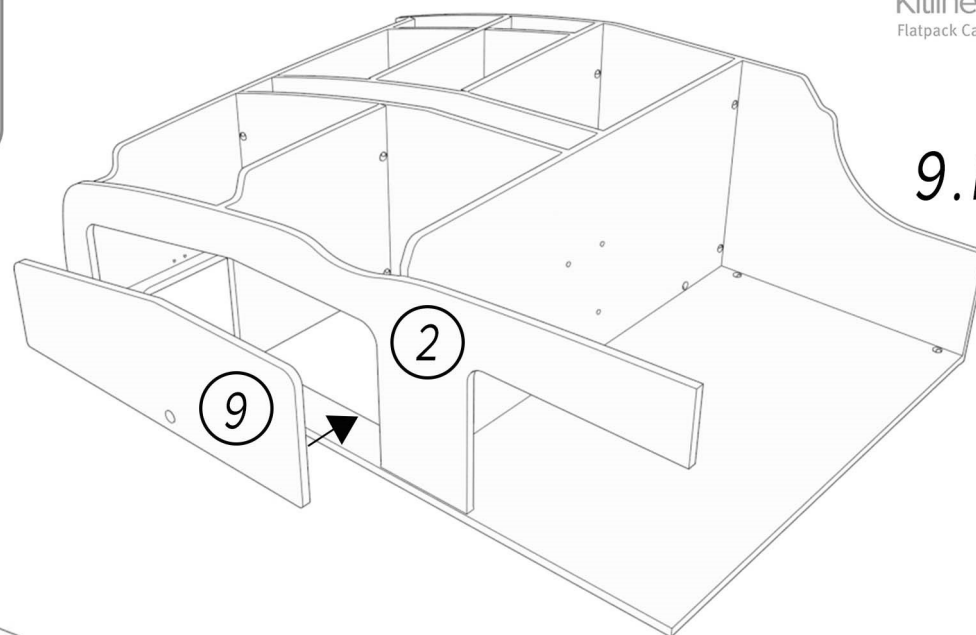

9.c

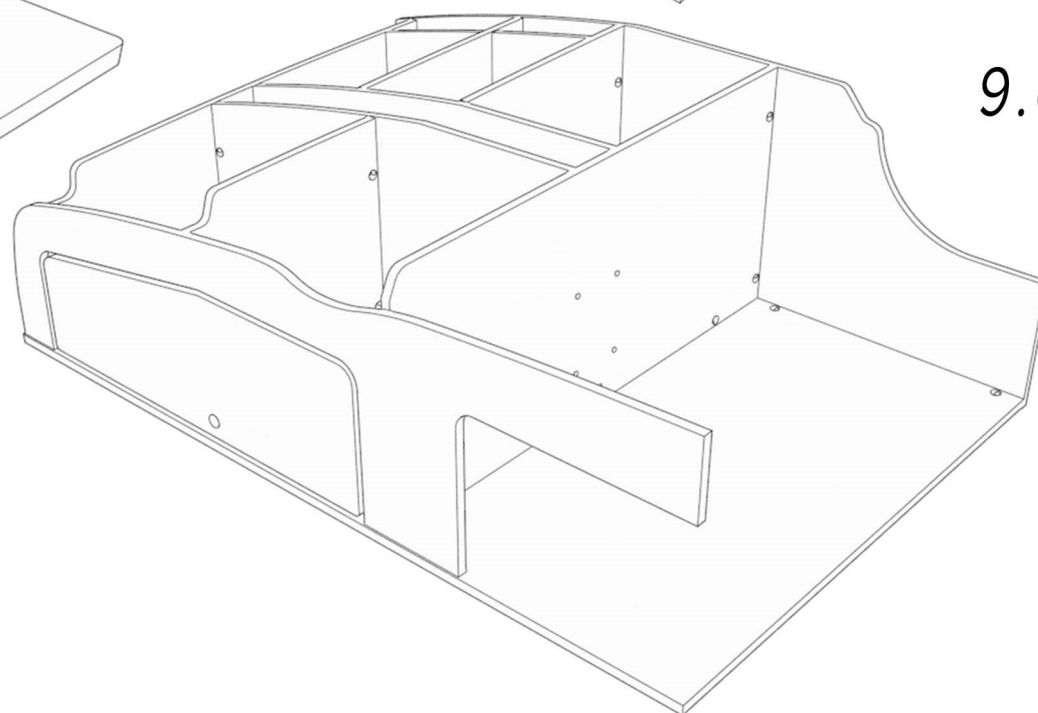


10.

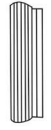

2x (L)

10.a

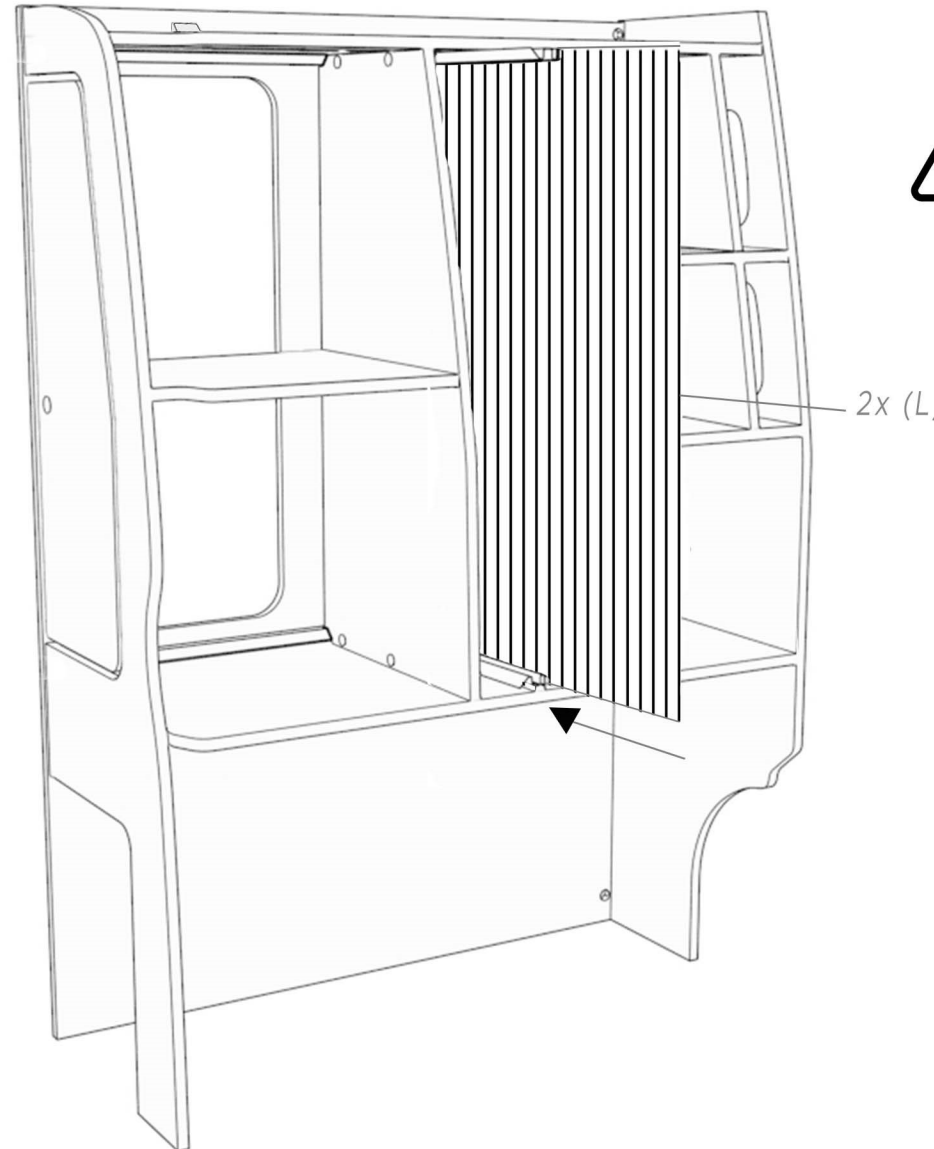

*Tambour doors must be fitted
BEFORE installing the wardrobe
into the van.*