

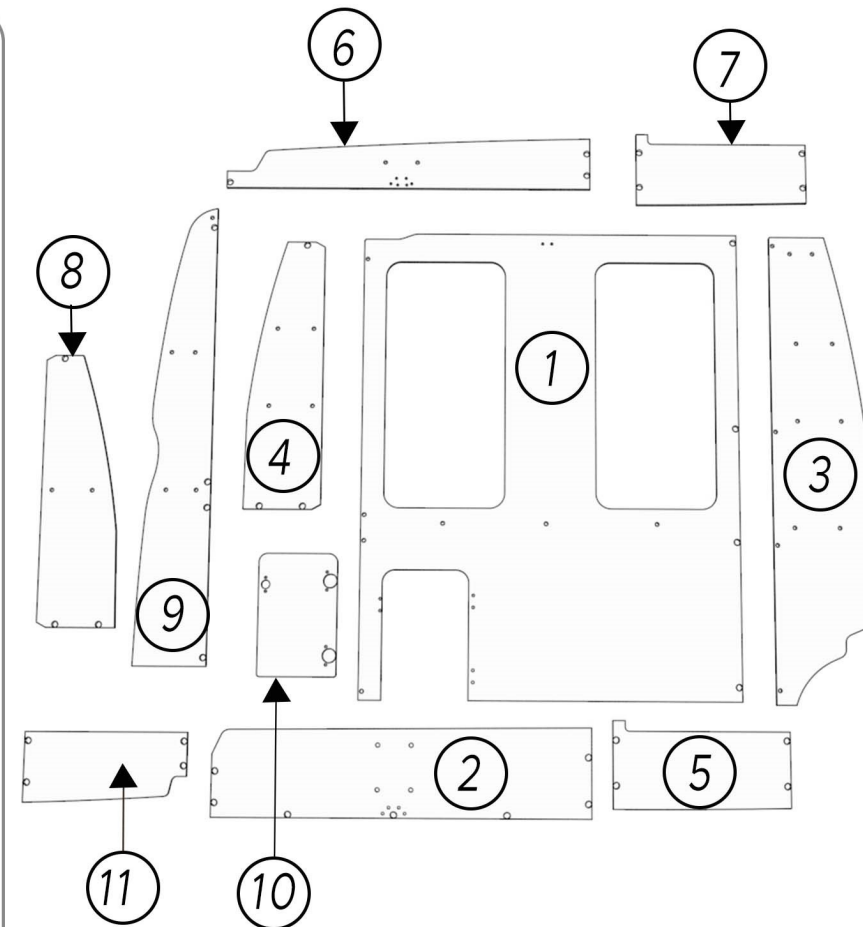
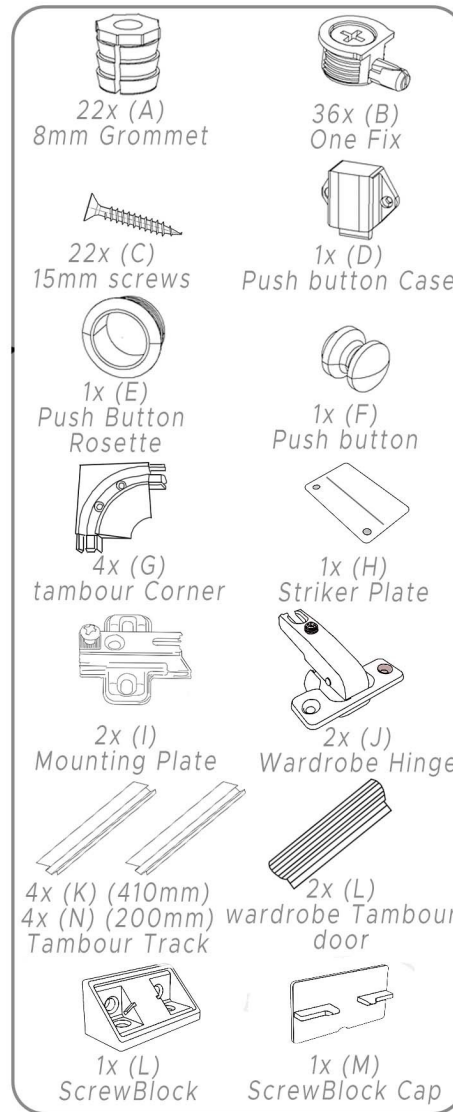
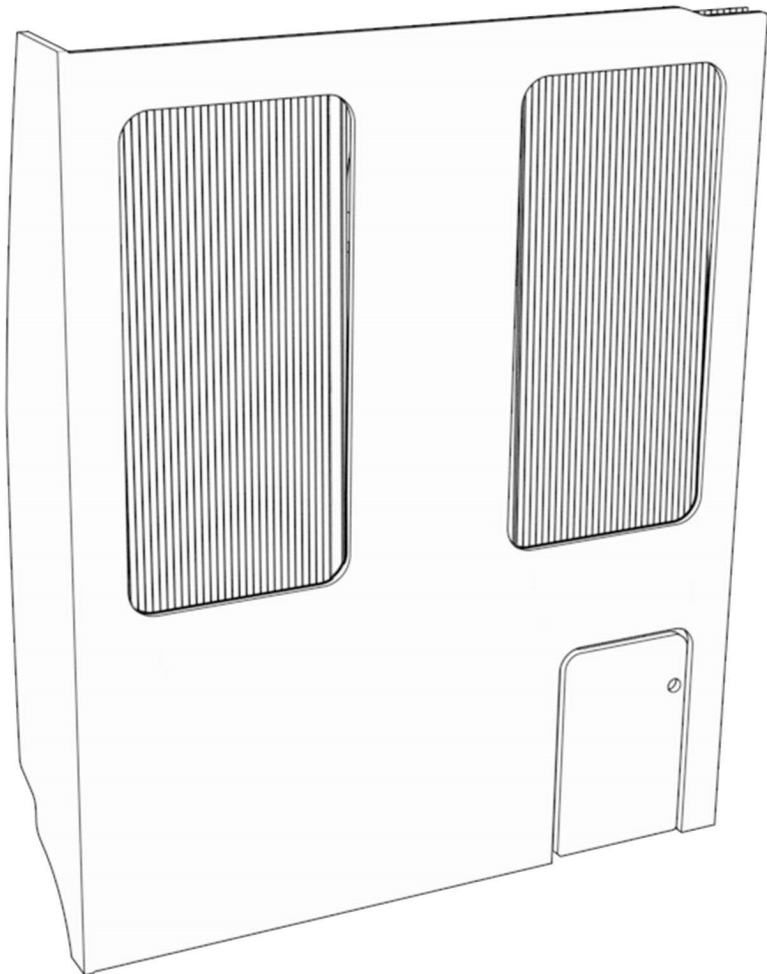
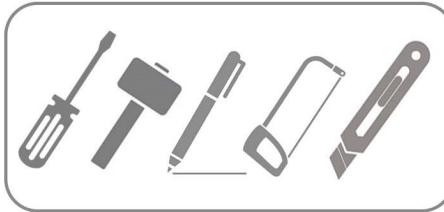



Surflite SWB Wardrobe

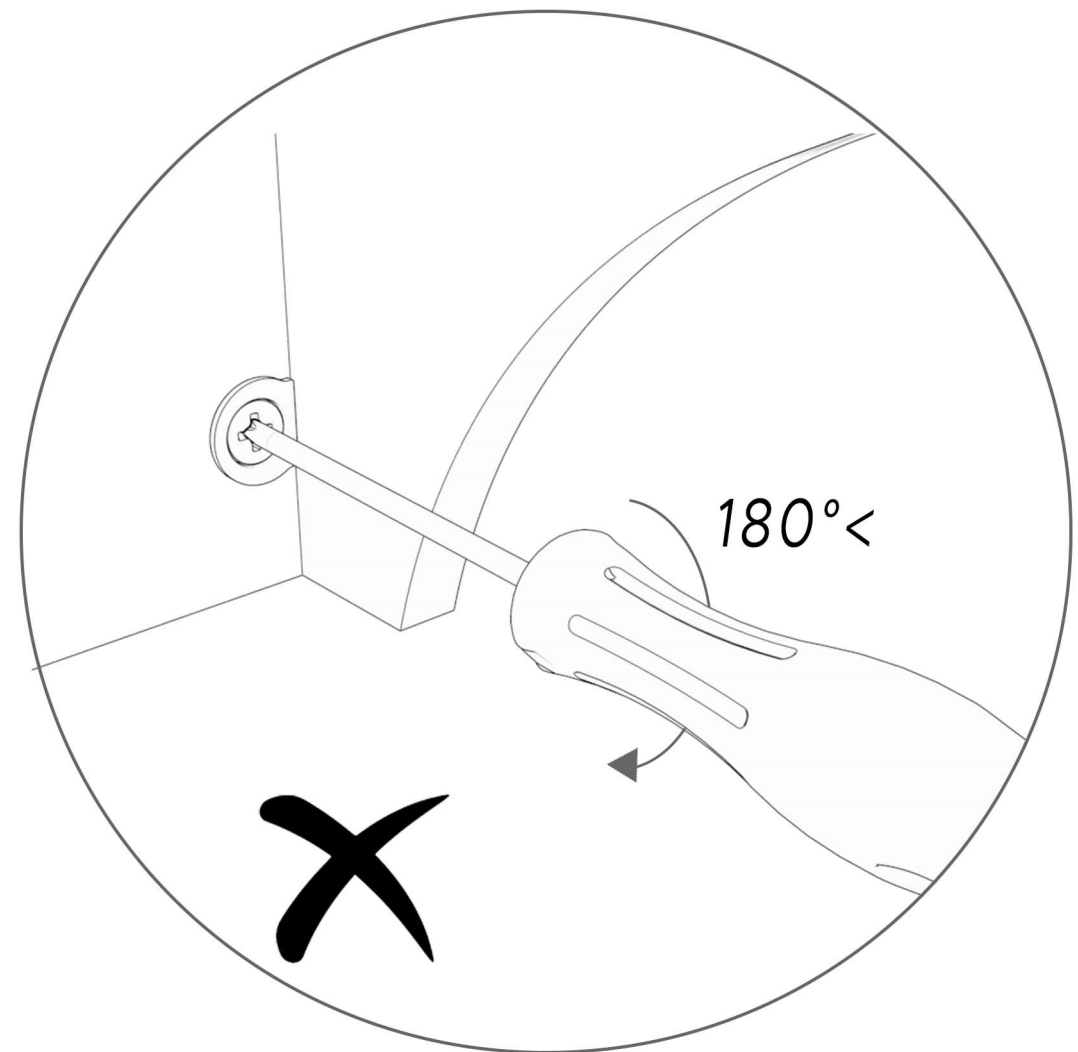




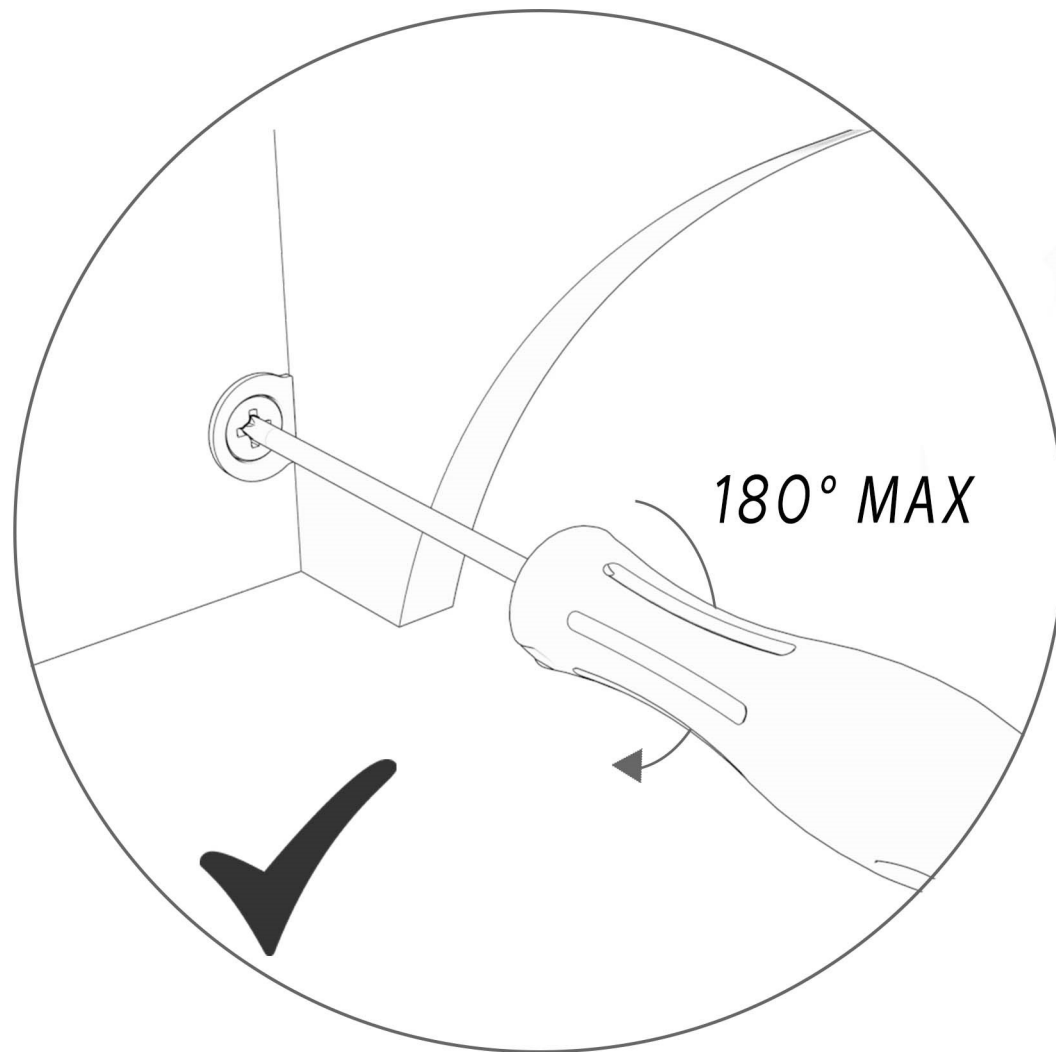


*Do not over tighten Onefix
Connectors!*

1.

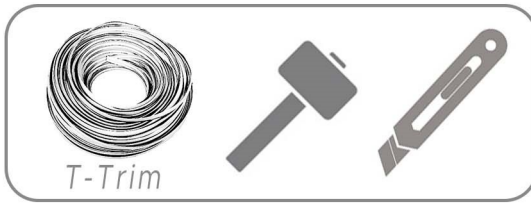


All pieces should have T-Trim applied before assembly!

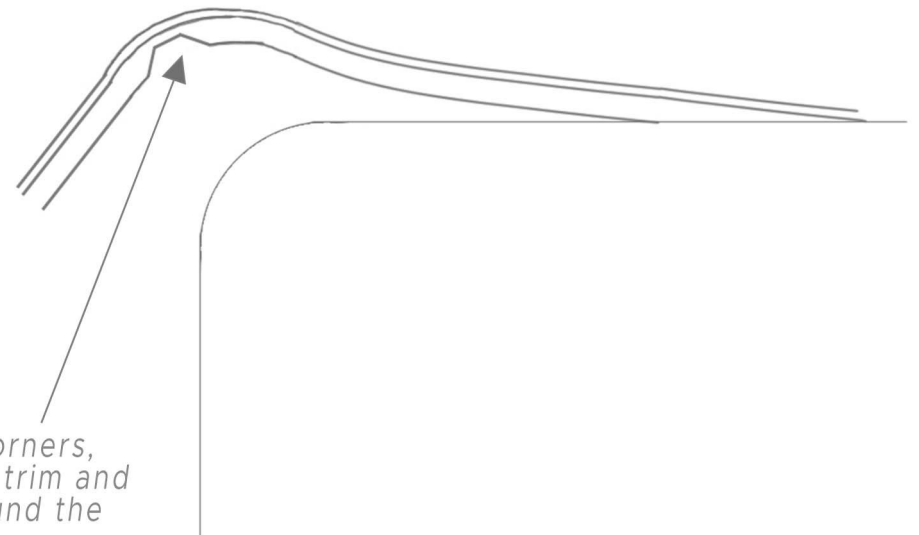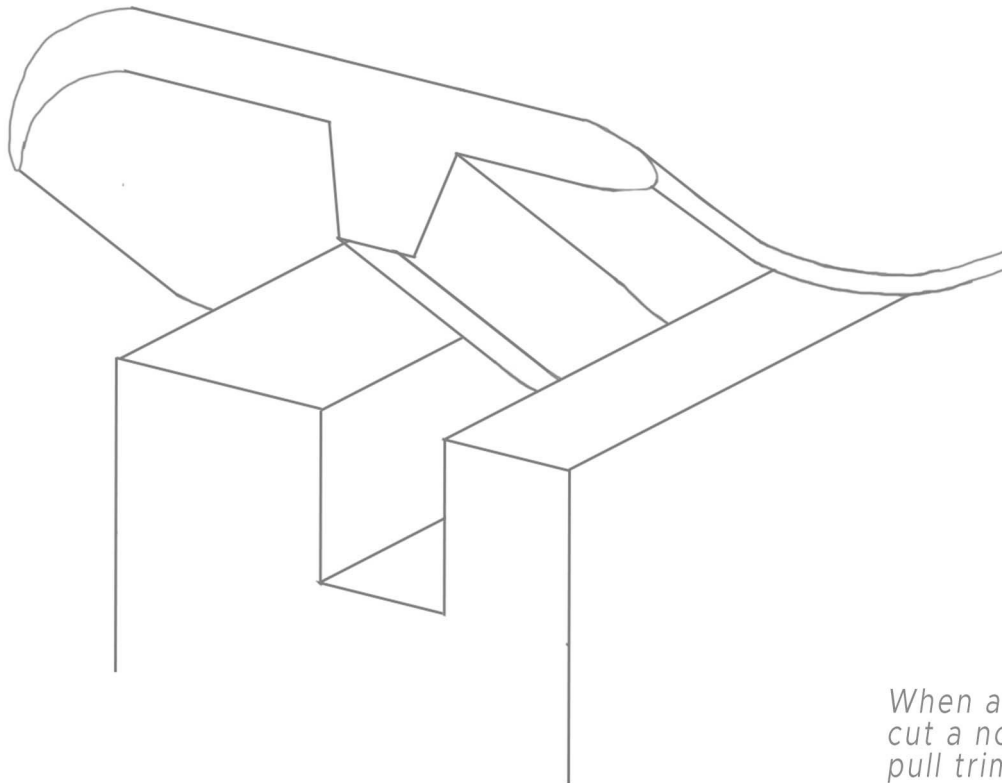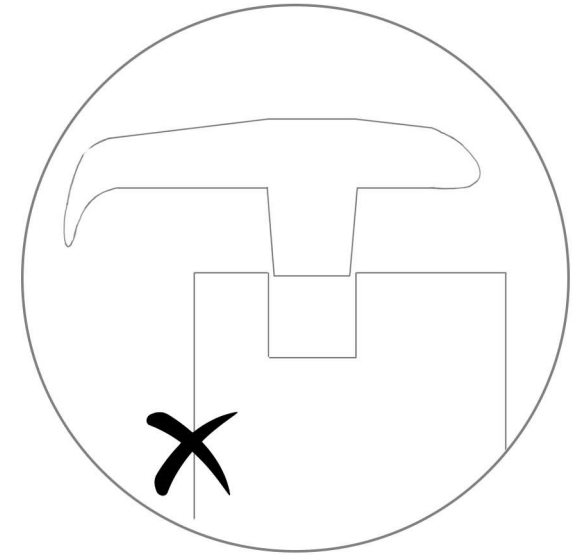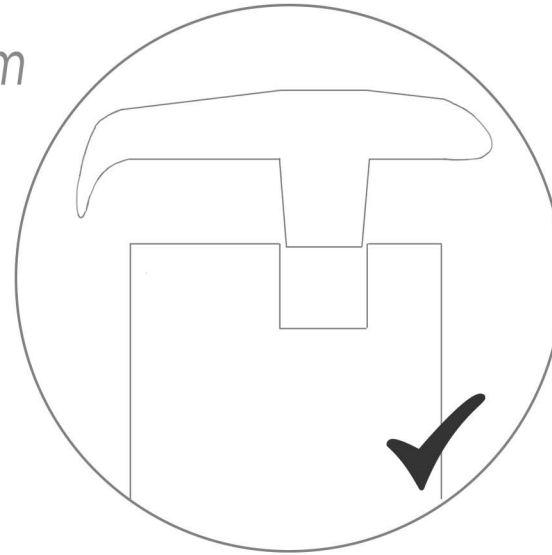


When applying to corners, cut a notch into the trim and pull trim tightly around the corner.


2.

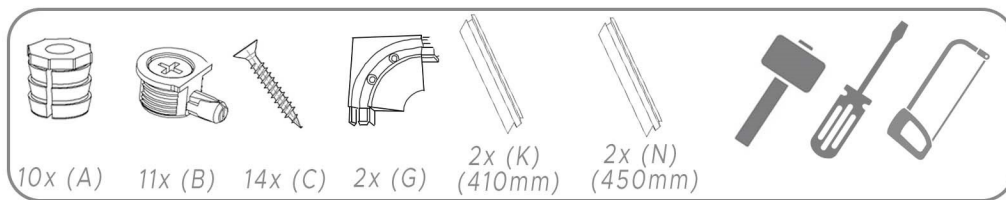


2.a

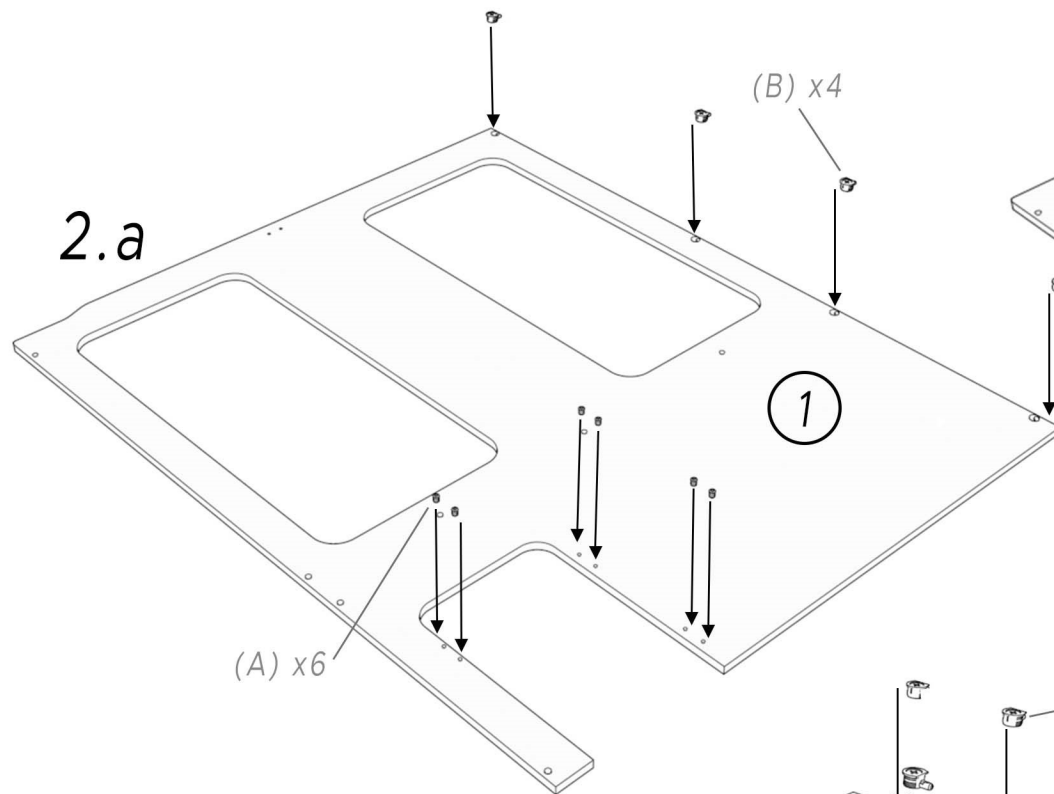


2.b

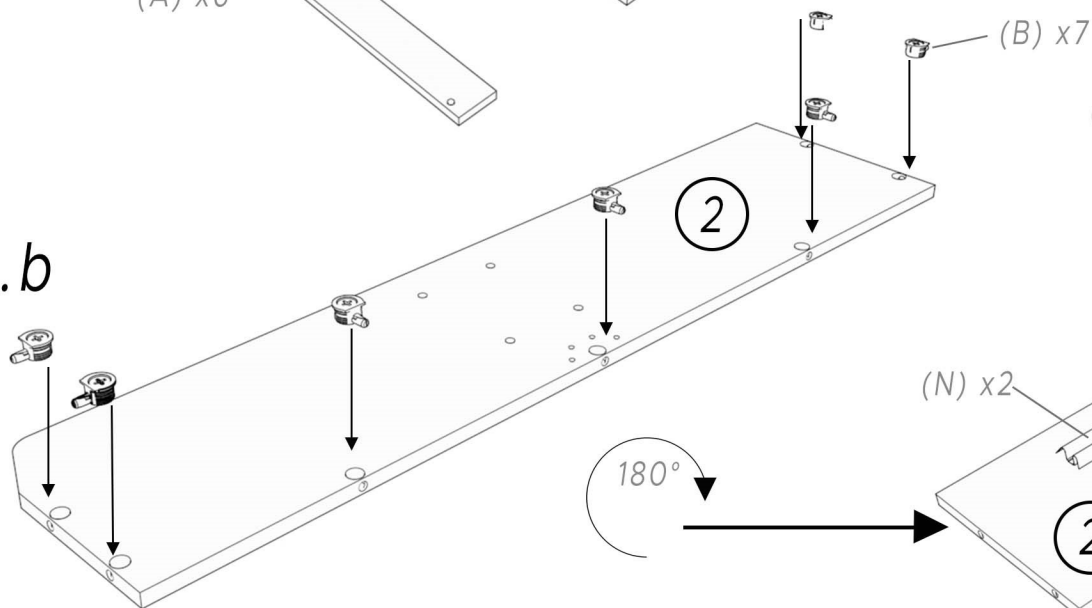


2.d

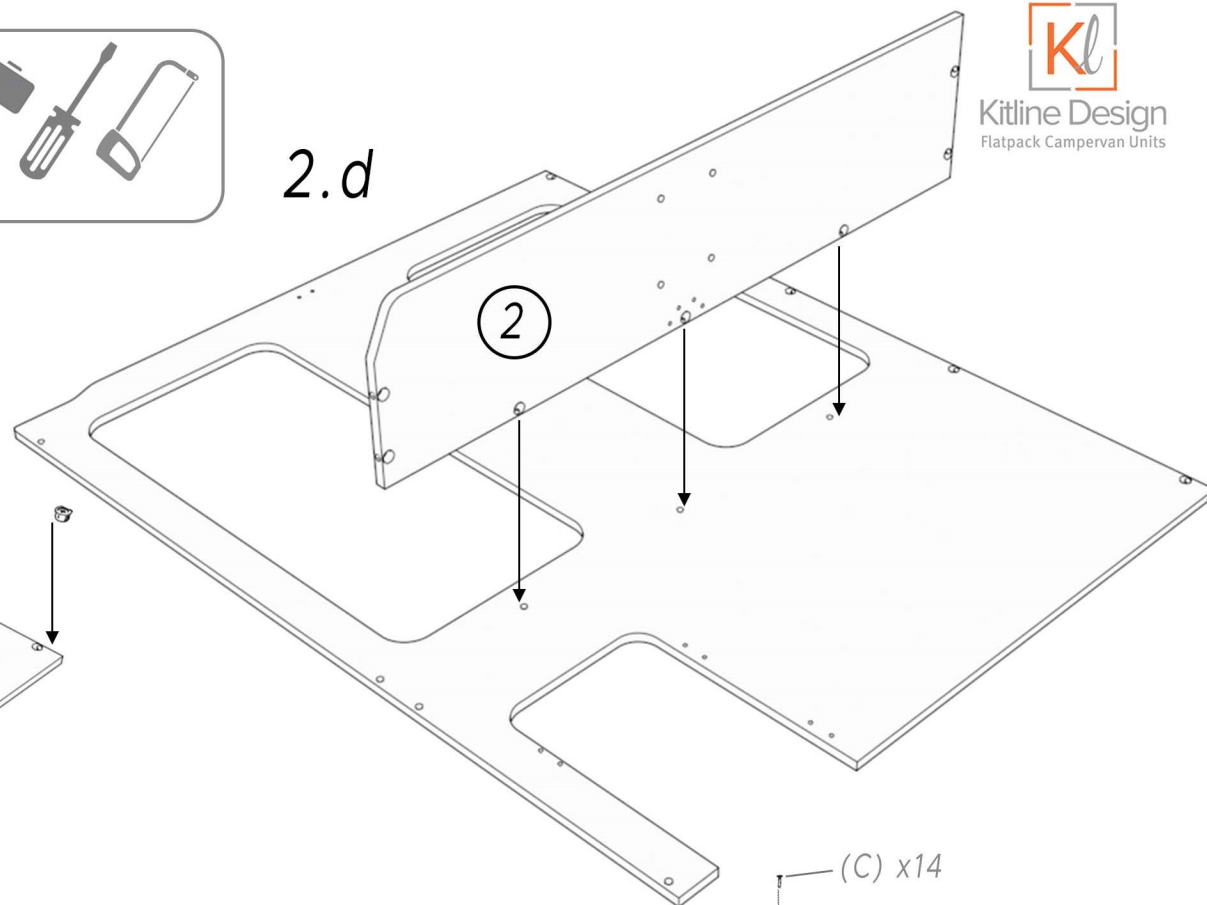

2.c

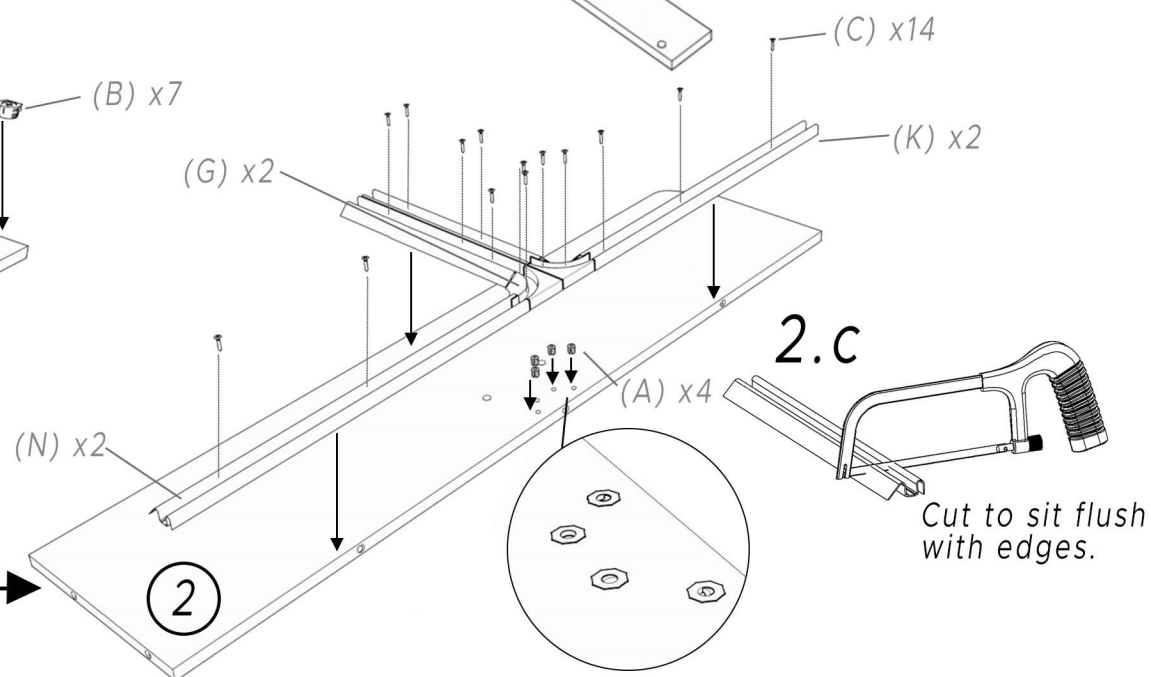


3.

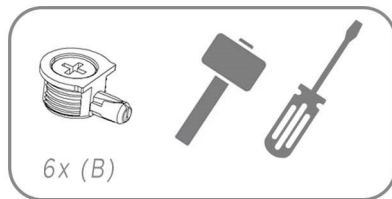


3.b


3.a

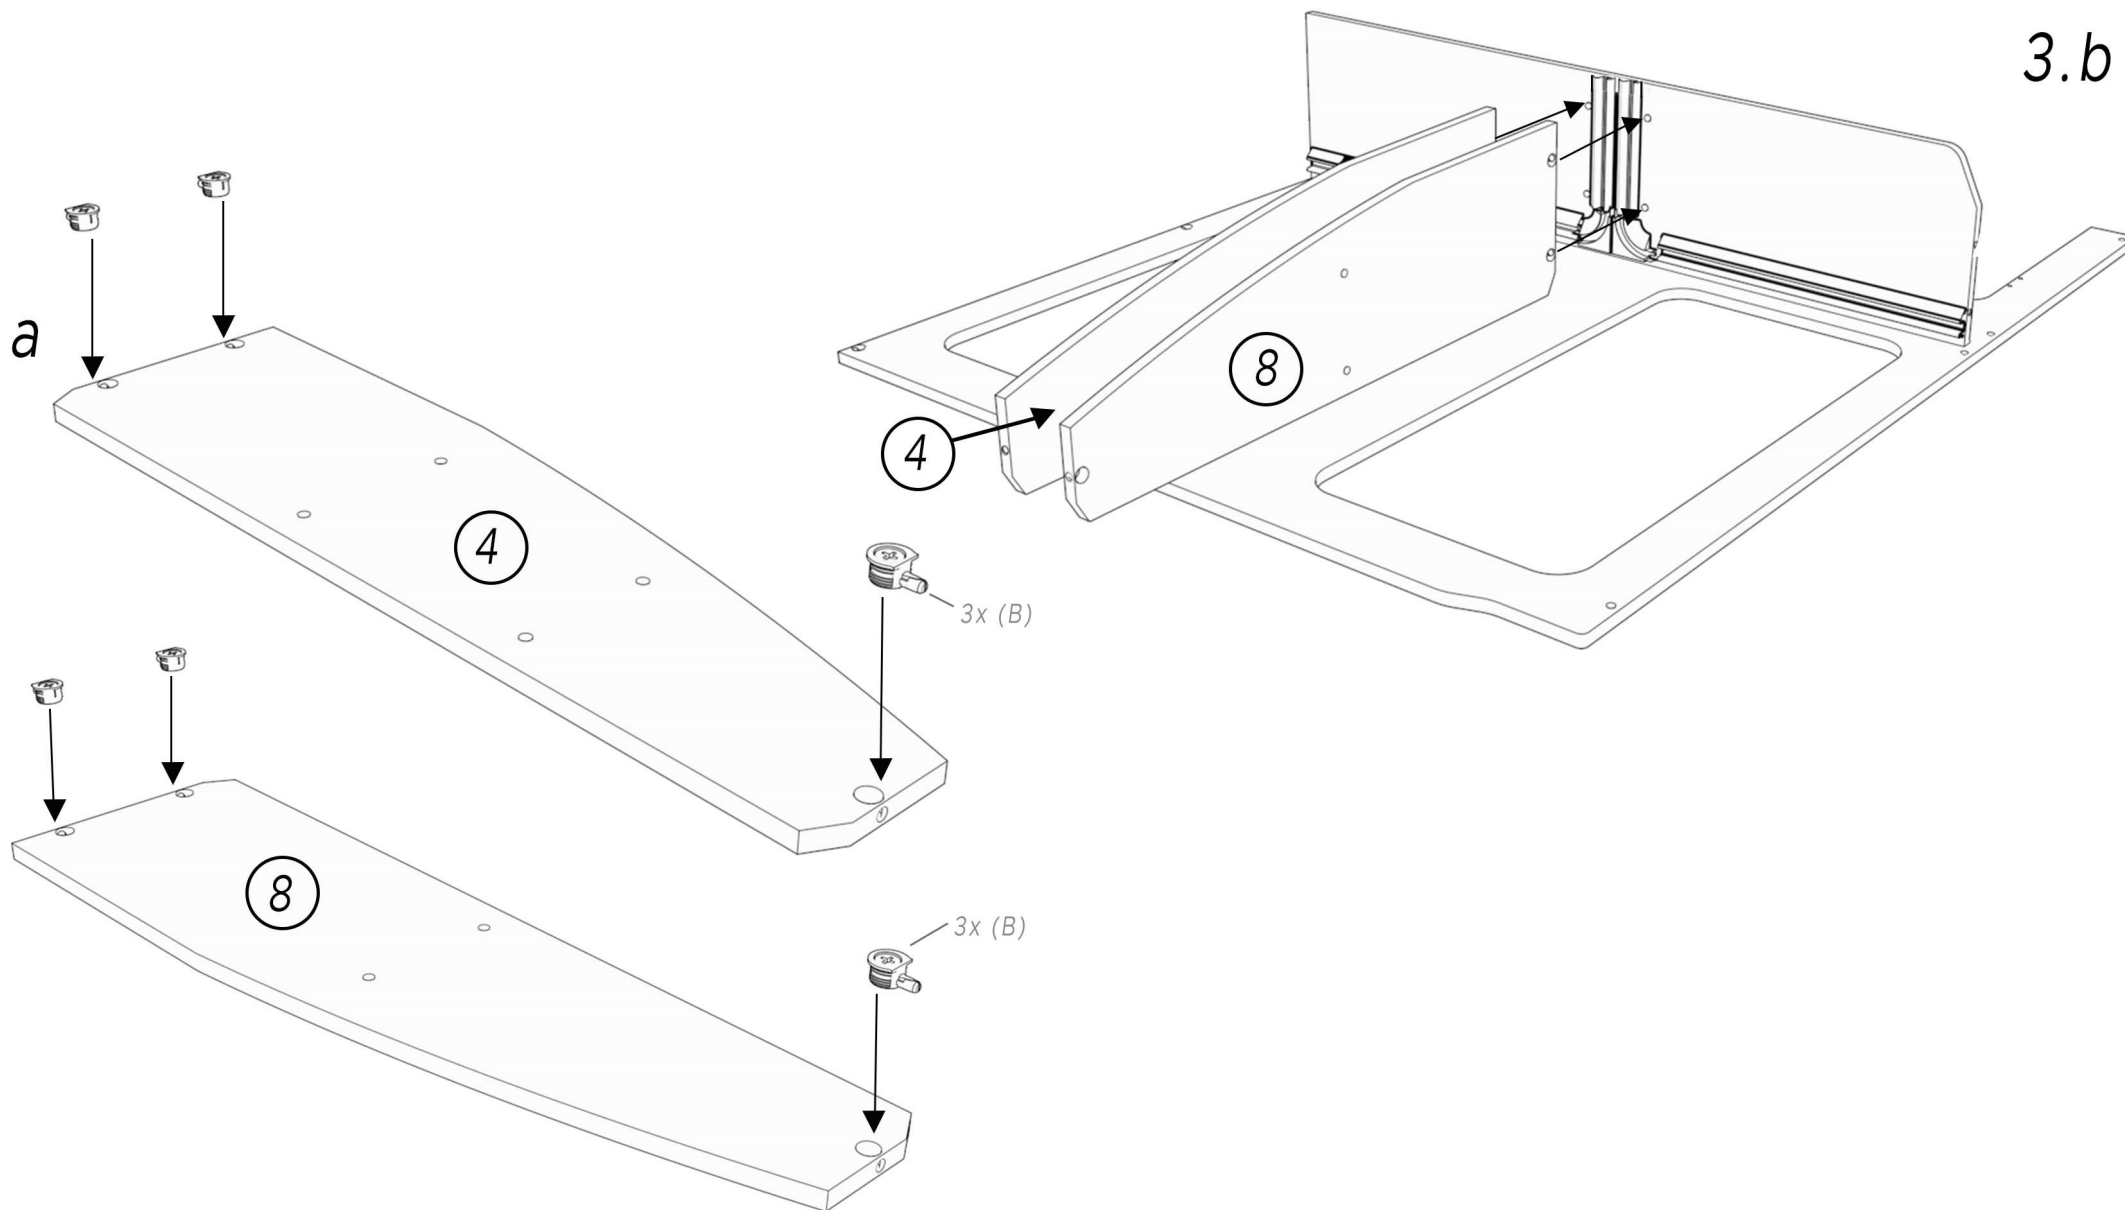


4.

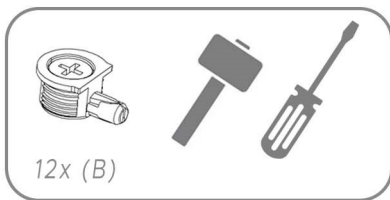


4.a

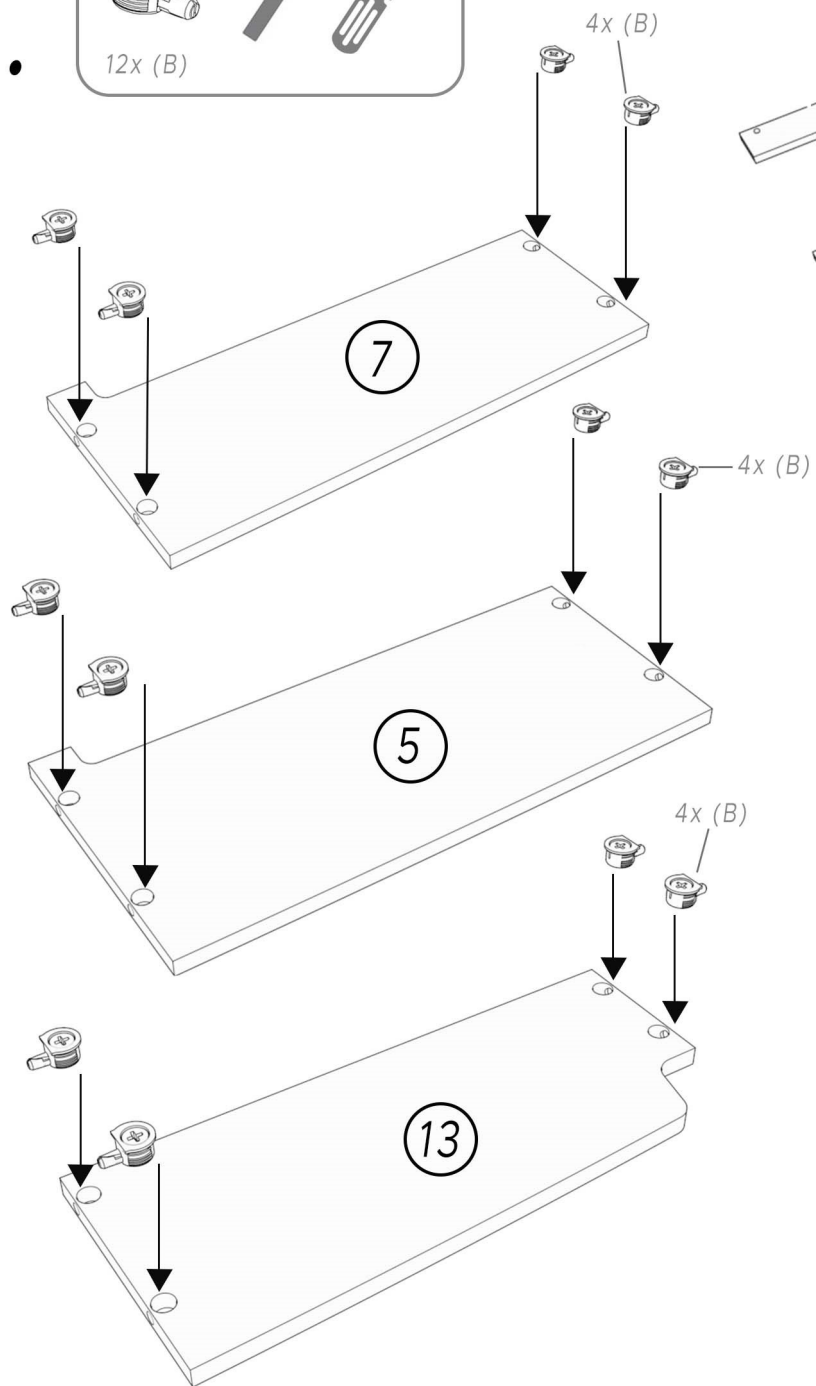


4.b

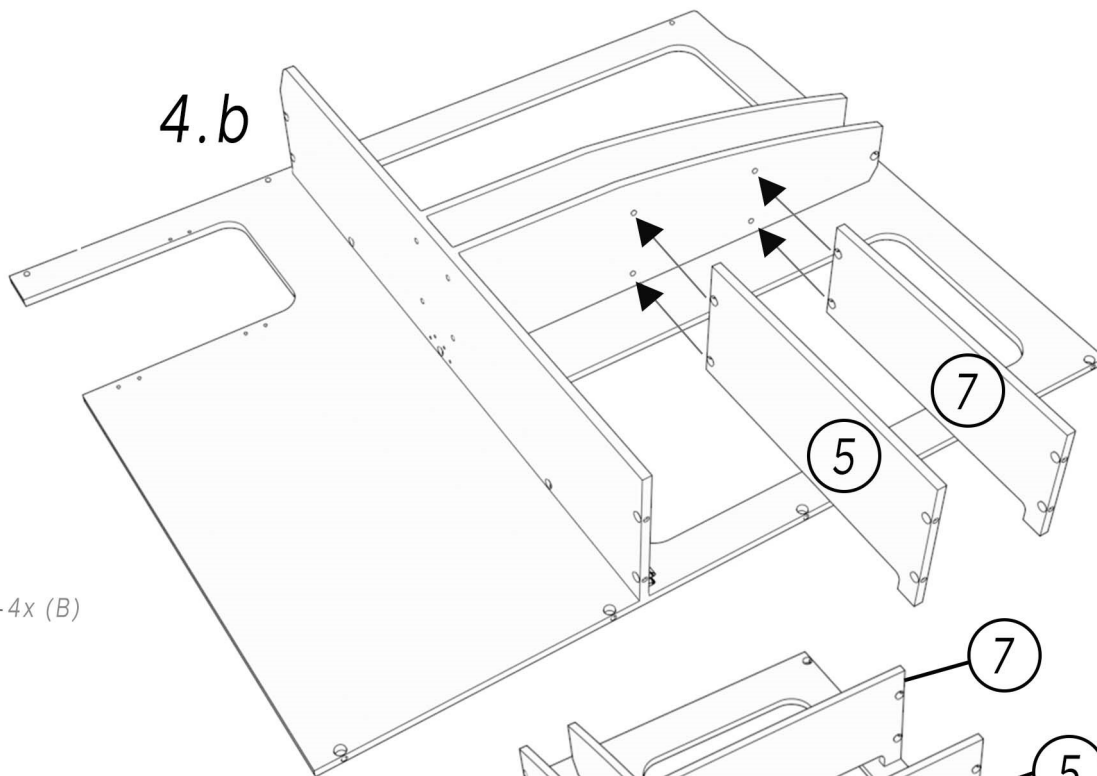


4.c

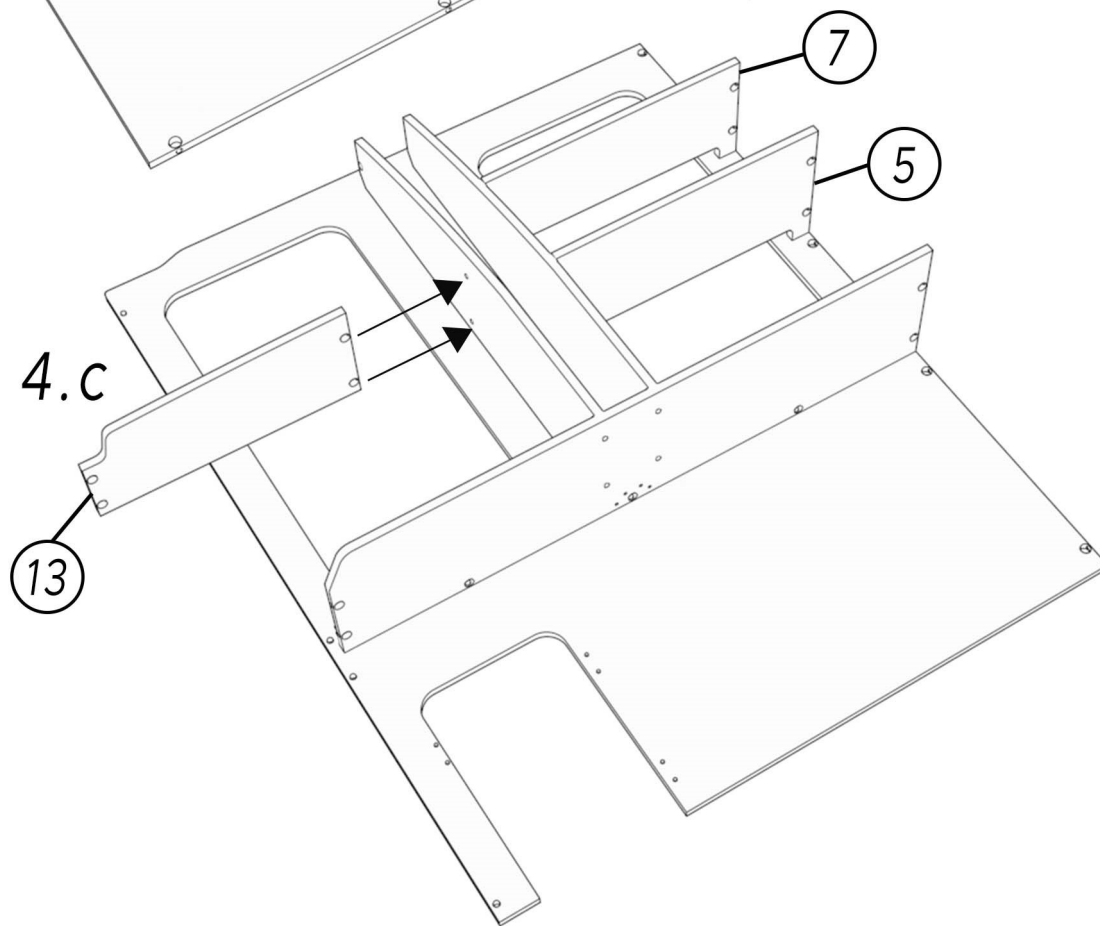


5.

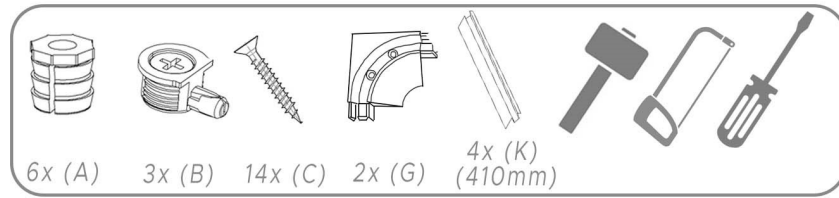


5.b

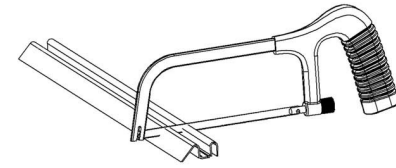


5.a

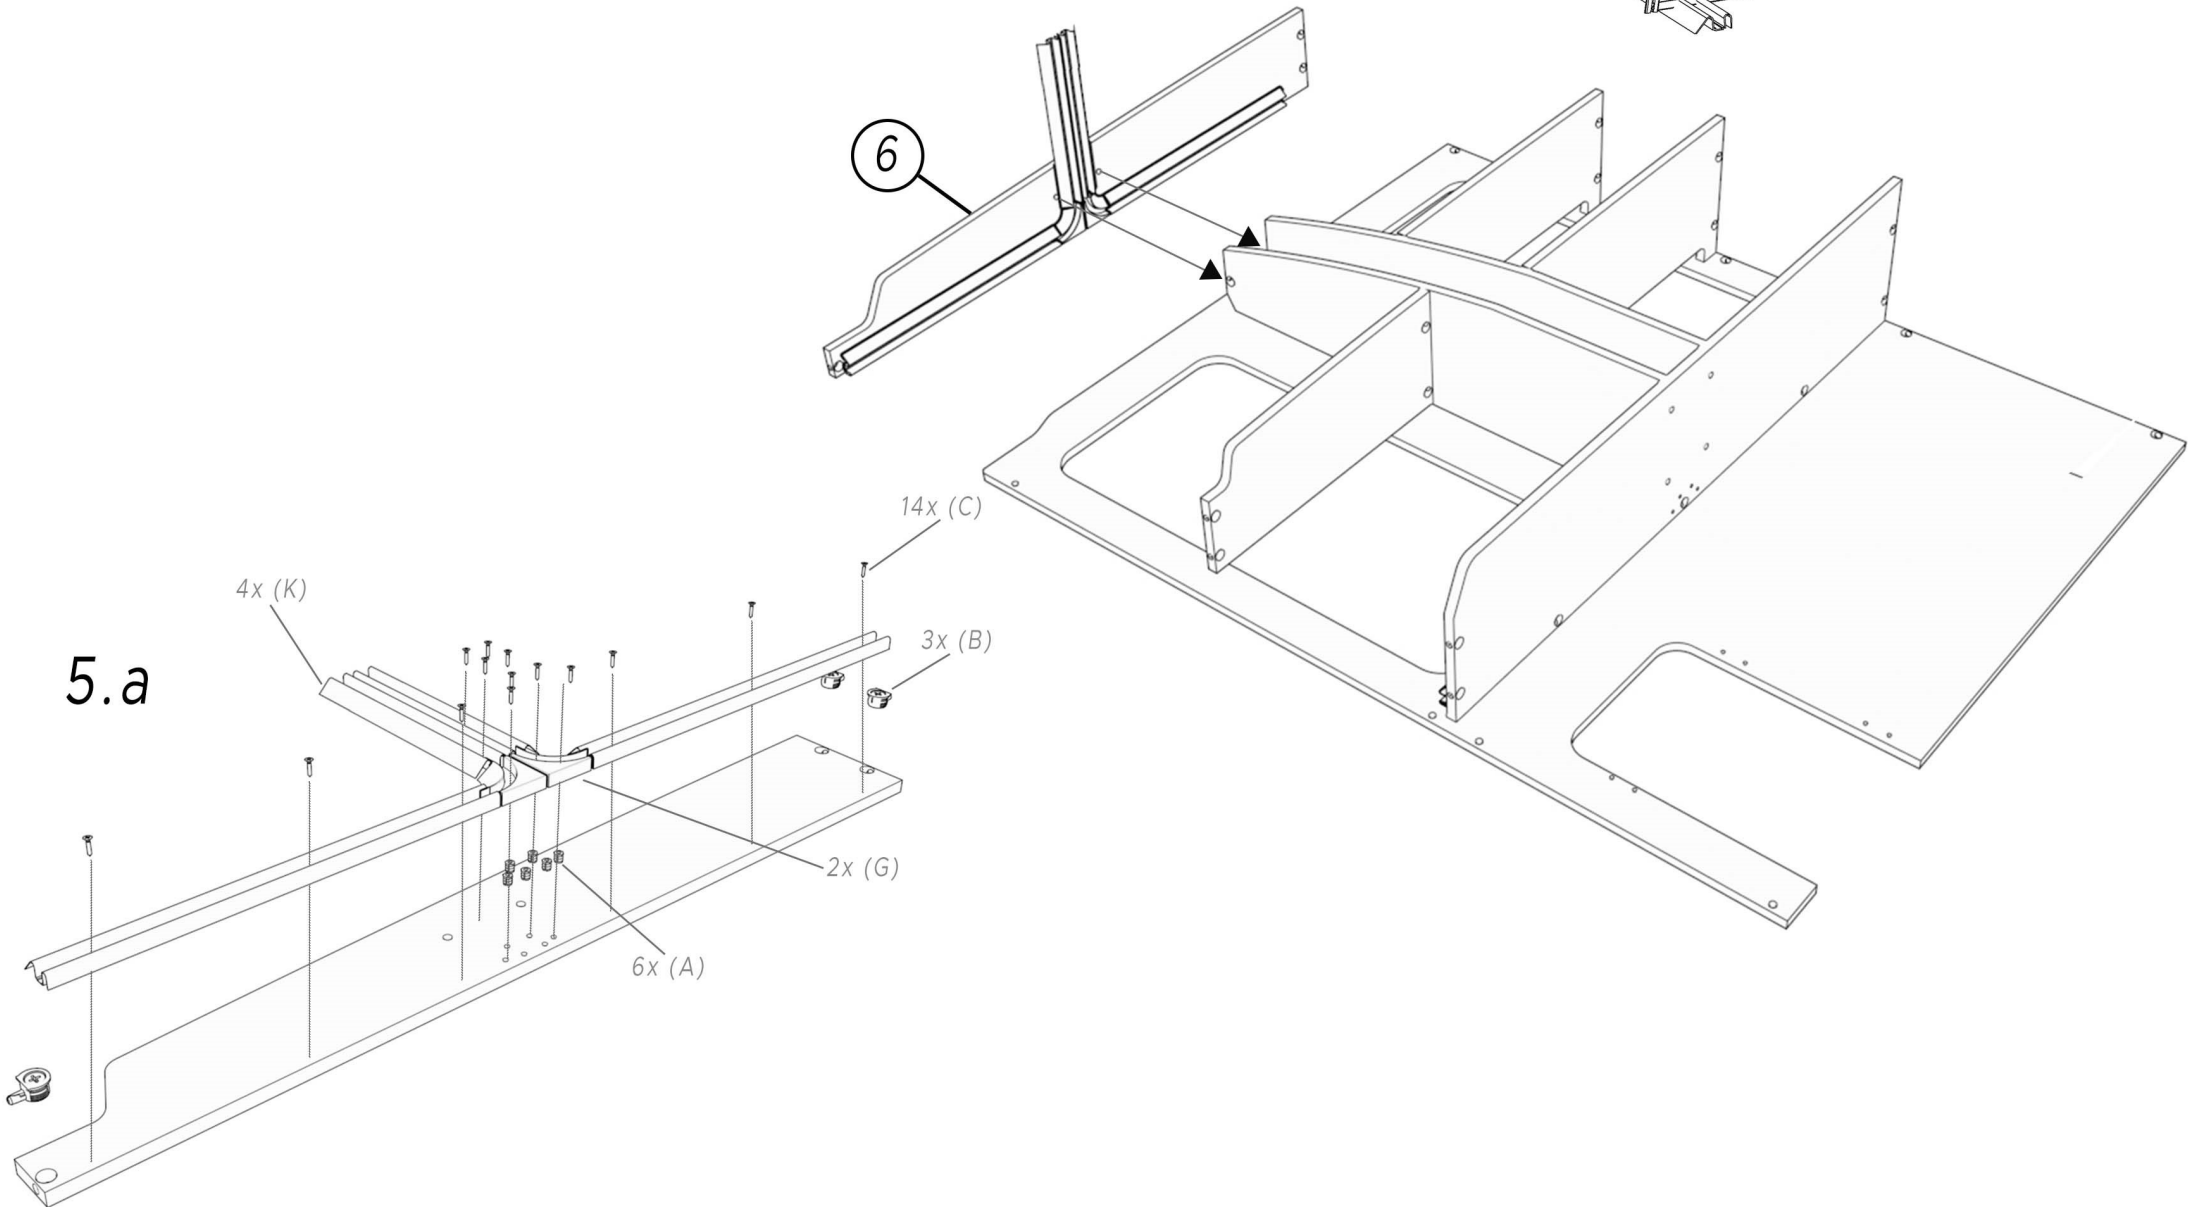


6.

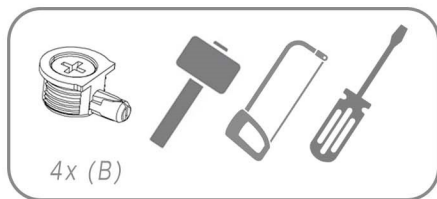

6.a

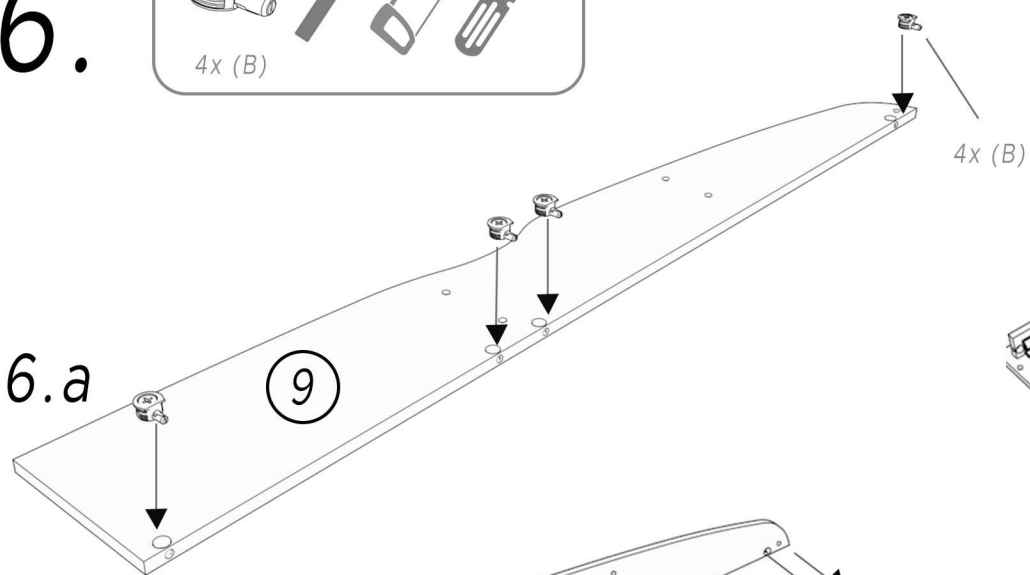


6.b

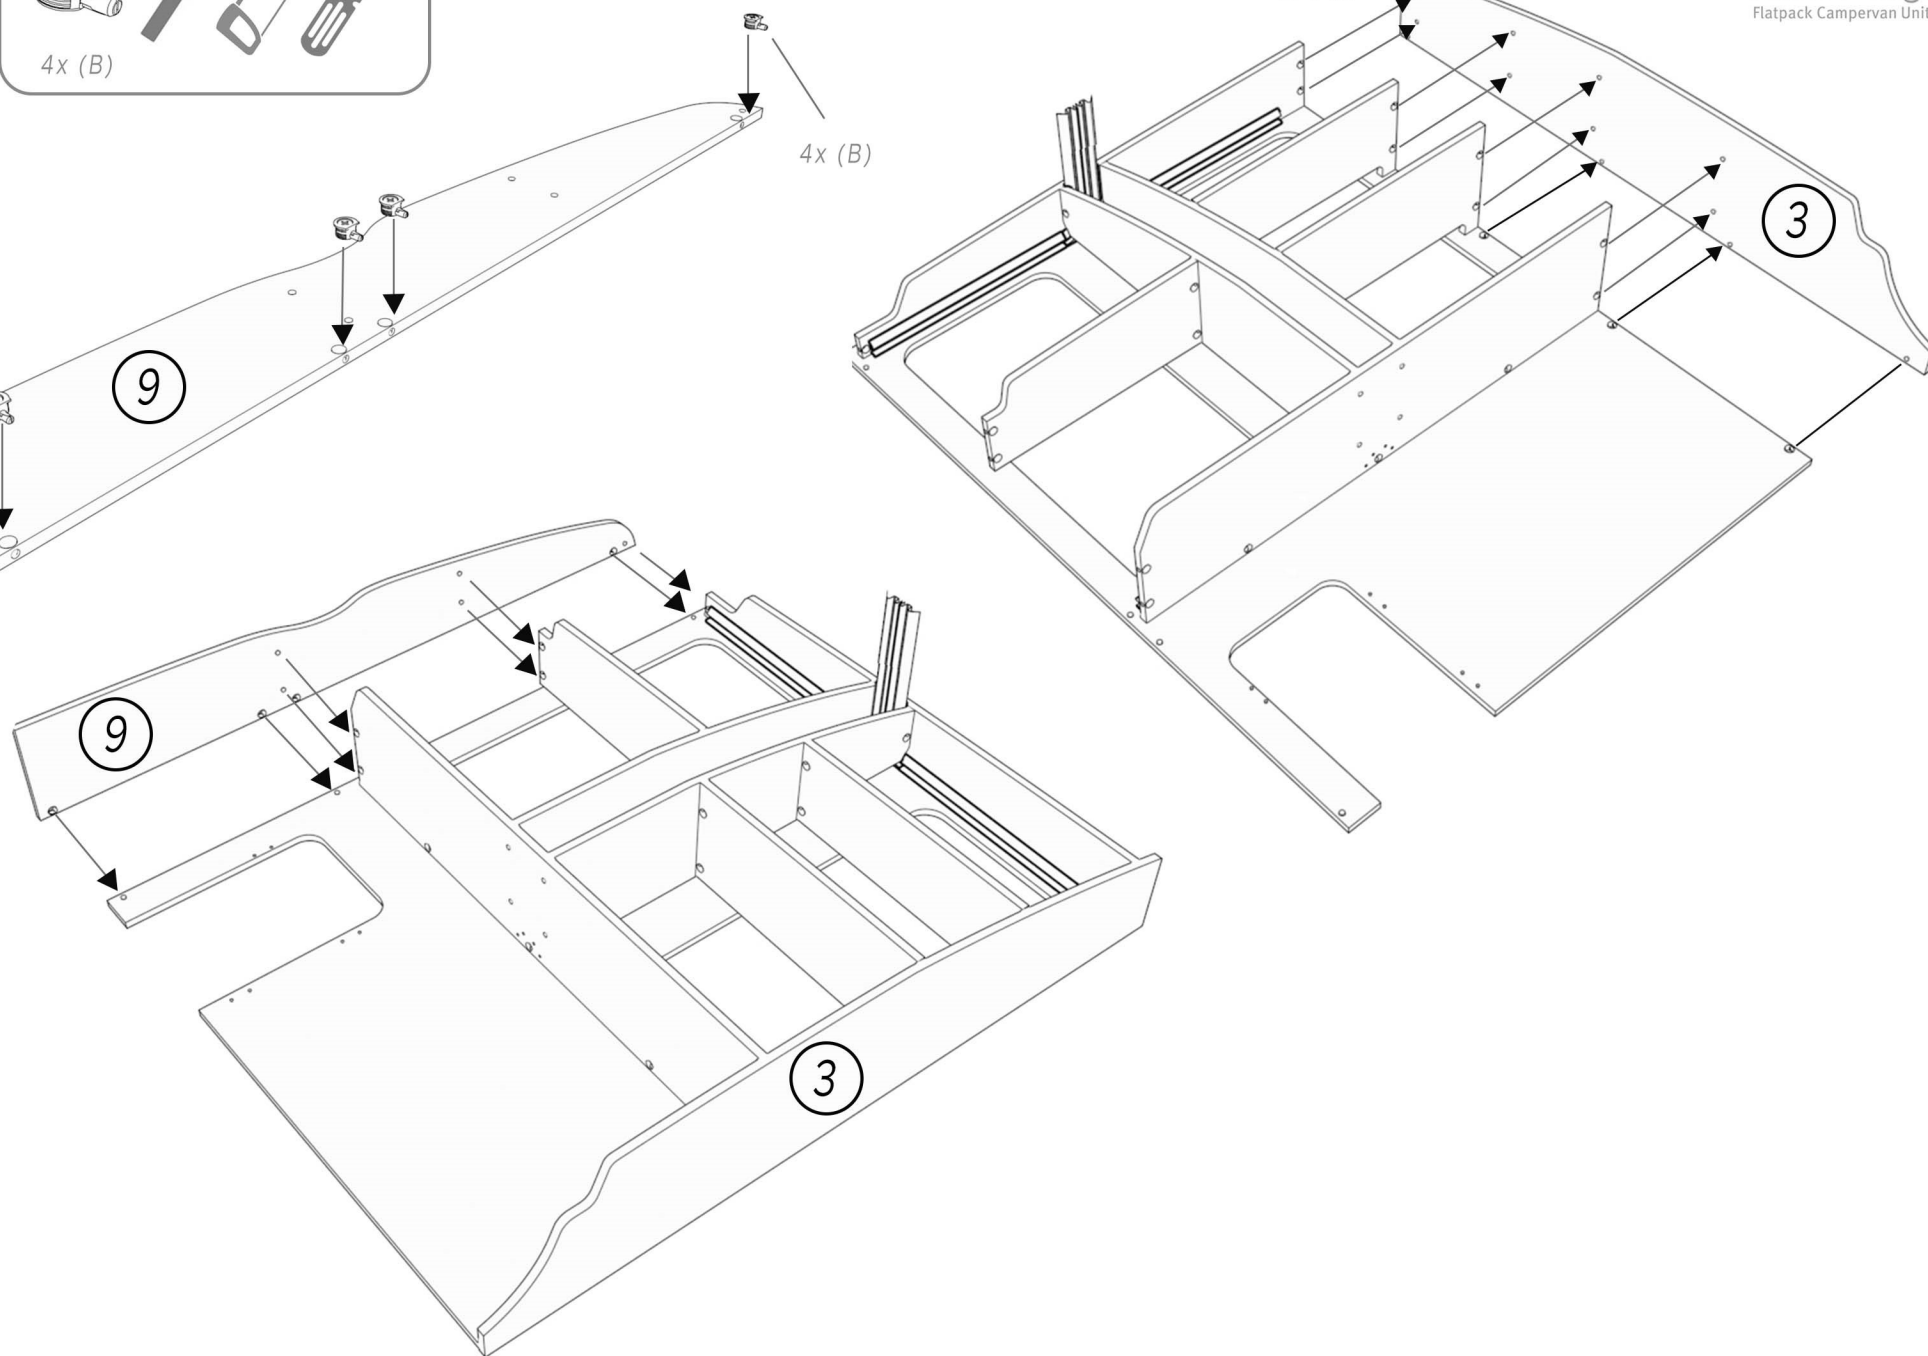




Kitline Design
Flatpack Campervan Units

7.

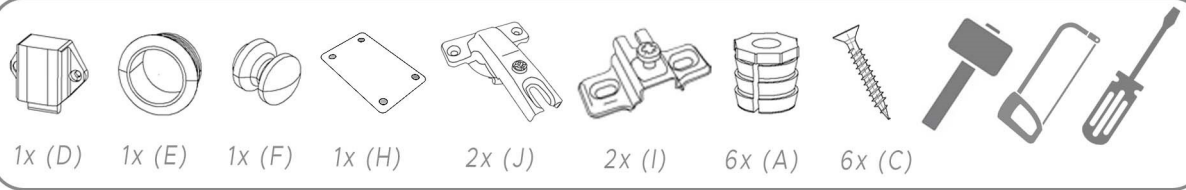


Kitline Design
Flatpack Campervan Units


7.a

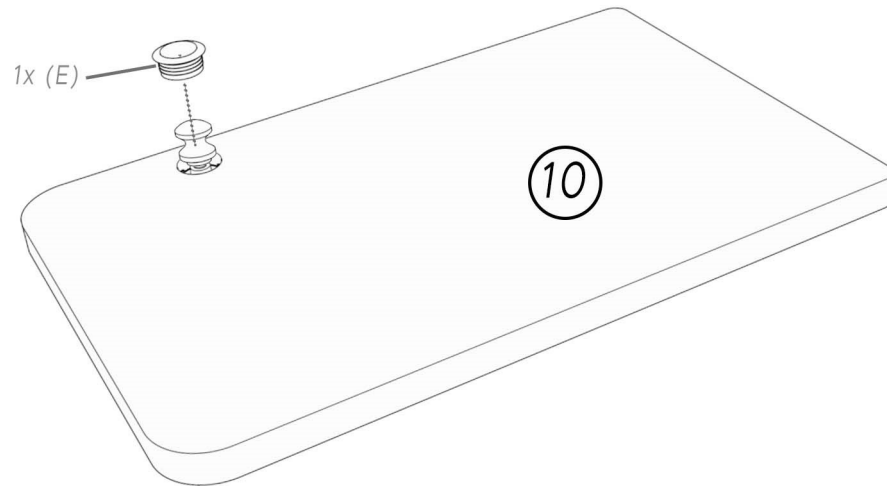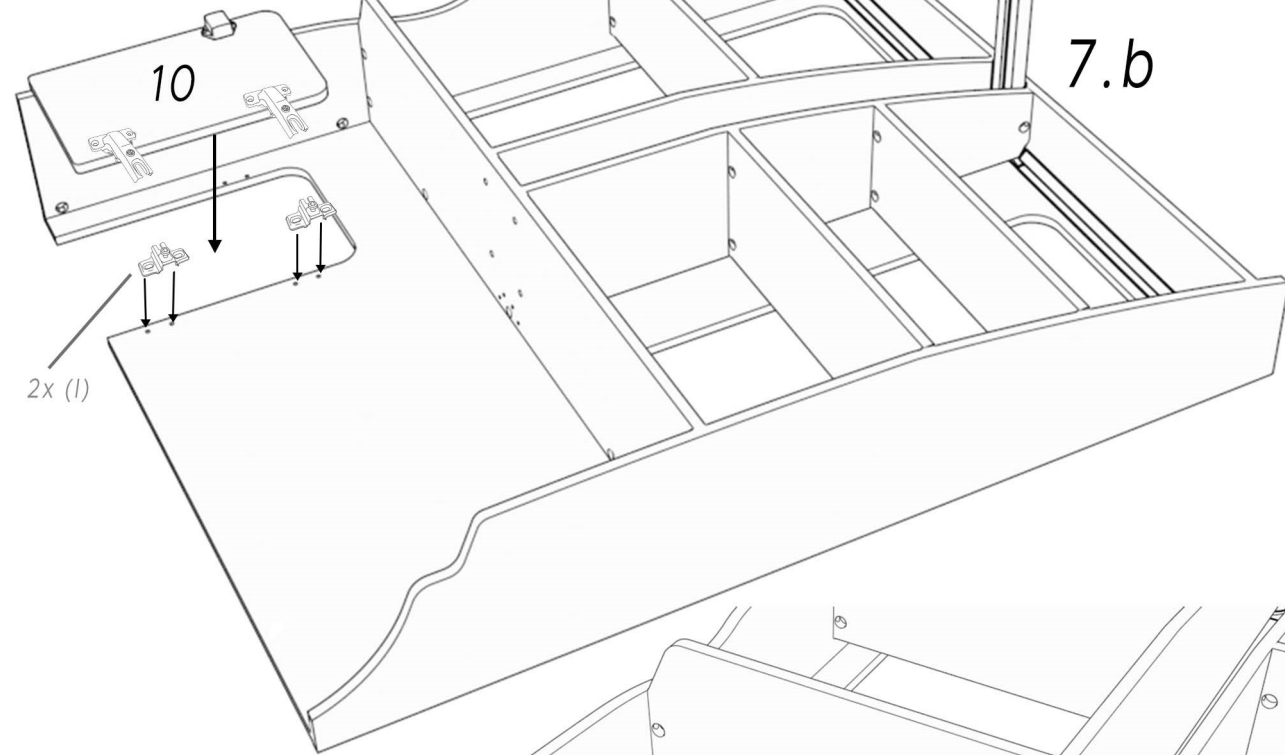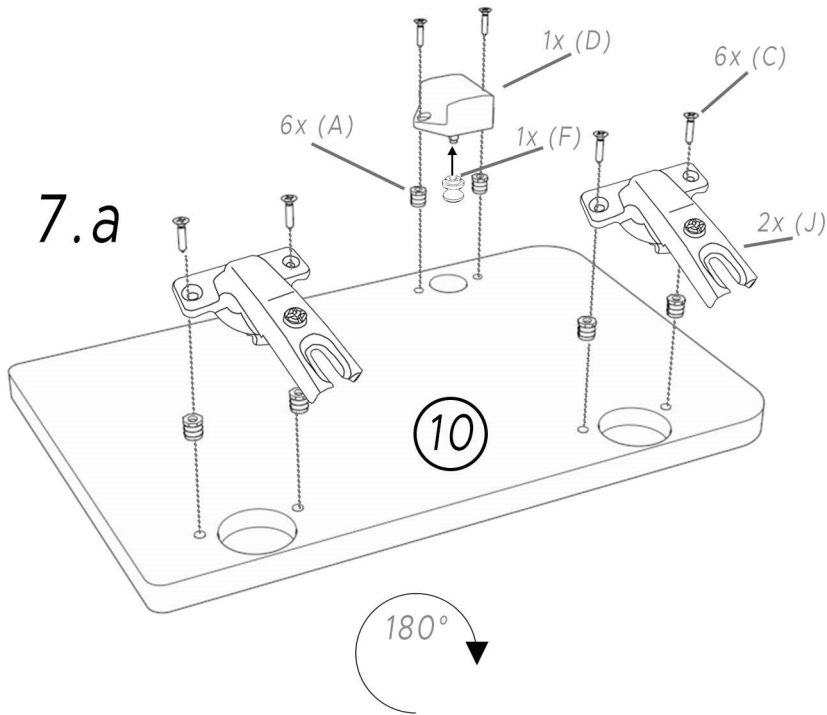


7.c

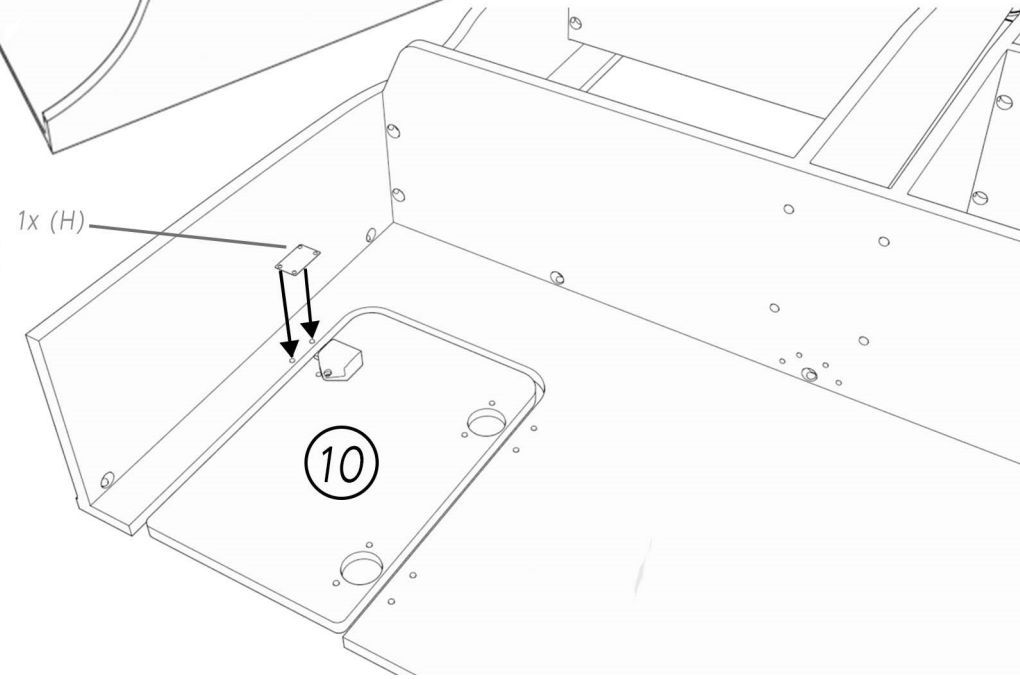

8.

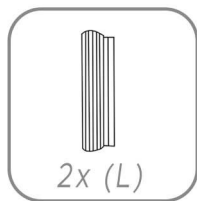

8.a

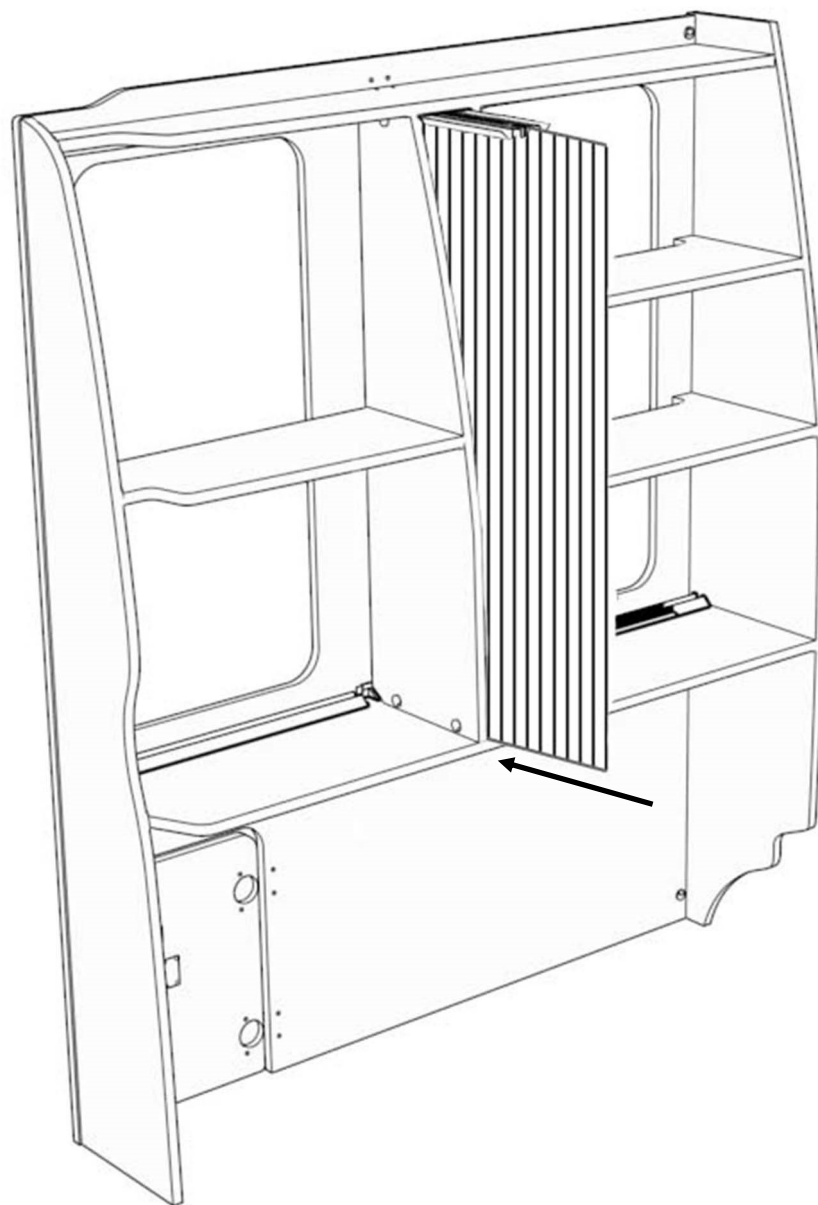

*Tambour doors must be fitted
BEFORE installing the wardrobe
into the van.*